

TOYOTA C-HR +

Mudflaps Front & Rear Set

Installation Instructions

Model year: As from 2025/12

Vehicle code: XEKM1**-TWD**W

Part number: PW389-42020

Manual reference number: AIM 005 702-0

Latest Version
SCAN HERE





CLICK TO NAVIGATE



REVISION RECORD



Page

3

KIT CONTENT



Page

4

TOOLS



Page

5

CONSUMABLES



Page

5

PERSONAL PROTECTION EQUIPMENT



Page

5

USEFUL GENERAL MANUALS



Page

6

GENERAL



Page

7

INSTALLATION INSTRUCTIONS



Pages 8 - 27

CHECK SHEET



Pages 28 - 31




Revision Record


Rev. No.	Date	Page	Step	Remarks



A

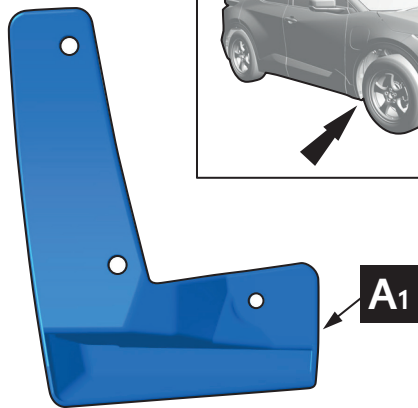


1x

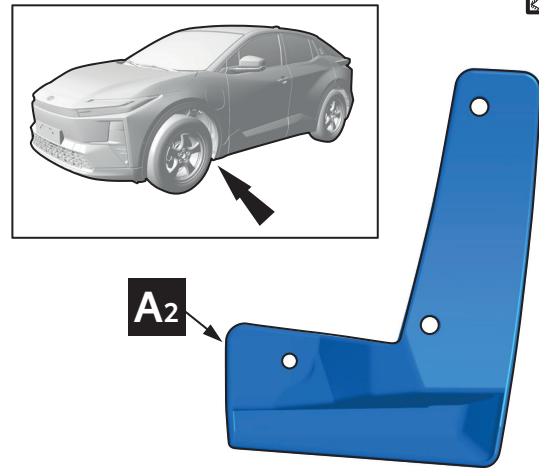


1x

B

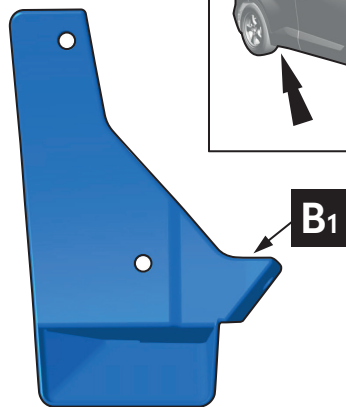


1x

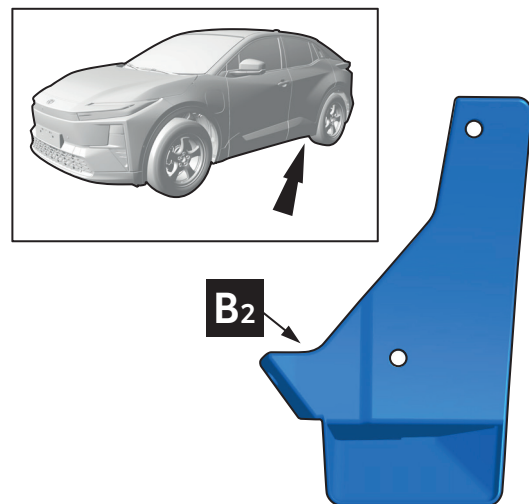

1x

C



SPARE PARTS

90159-50388

4x

D




SPARE PARTS

90159-60623

6x

E




SPARE PARTS

90183-05040

4x

F

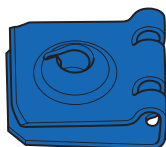


SPARE PARTS

90183-06019

6x

G









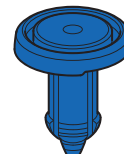


SPARE PARTS


75867-33050

2x




TOOLS

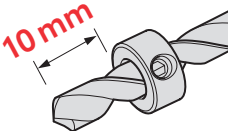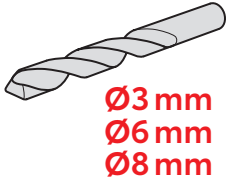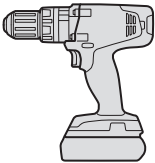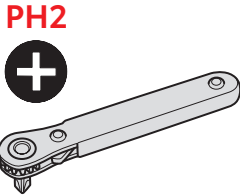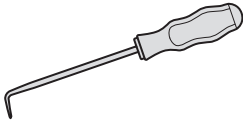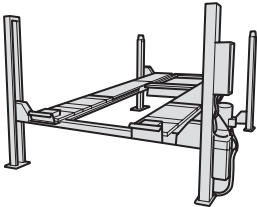RATCHET	TORQUE WRENCH	HEXAGONAL SOCKET	DRILL STOPPER	COBALT DRILL BIT
				
DRILL	90° DRILL ATTACHMENT	CLIP REMOVAL TOOL	PHILIPS SCREW DRIVER	90° BRADDLE PICK
				
4 POST CAR LIFT				
				

CONSUMABLES

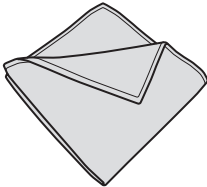CLEANER / DEGREASER	MICROFIBER CLOTH			
				

PERSONAL PROTECTION EQUIPMENT

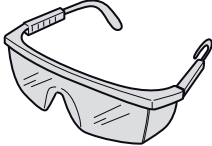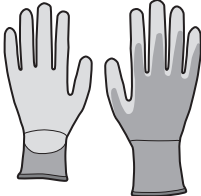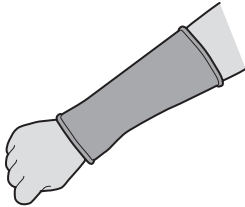
SAFETY GLASSES	PROTECTIVE GLOVES	SAFETY SHOES	SAFETY CAP	FOREARM PROTECTION
				

USEFUL GENERAL MANUALS

CLEANER / DEGREASER



Latest Version
SCAN HERE

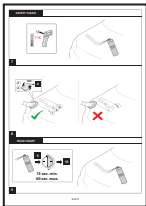

SYMBOLS




Latest Version
SCAN HERE



WHEEL TORQUE VALUES



Latest Version
SCAN HERE

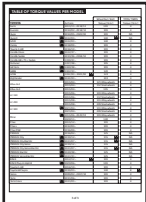

GENERAL



Info



Material Safety Data Sheet



Technical Data Sheet

GENERAL



Info





1 → 17

GENERAL




Info

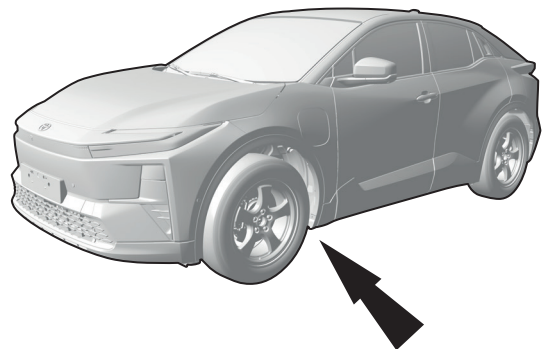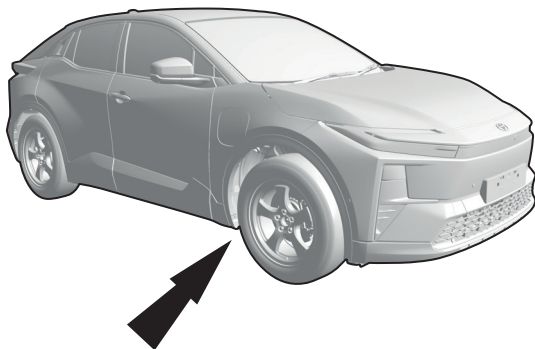


18 → 37




INSTALLATION INSTRUCTIONS

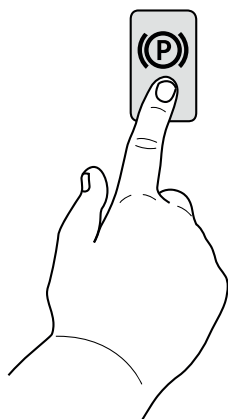




1

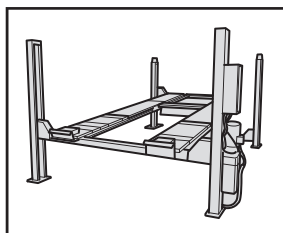





2

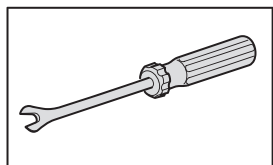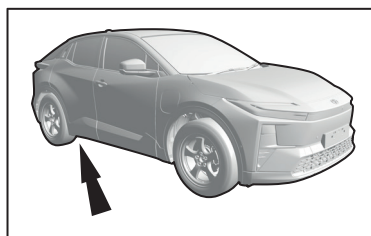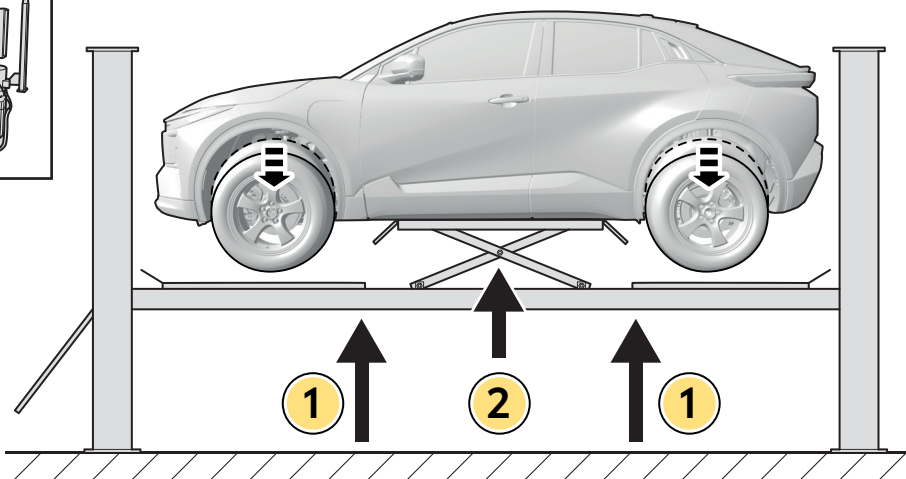




3

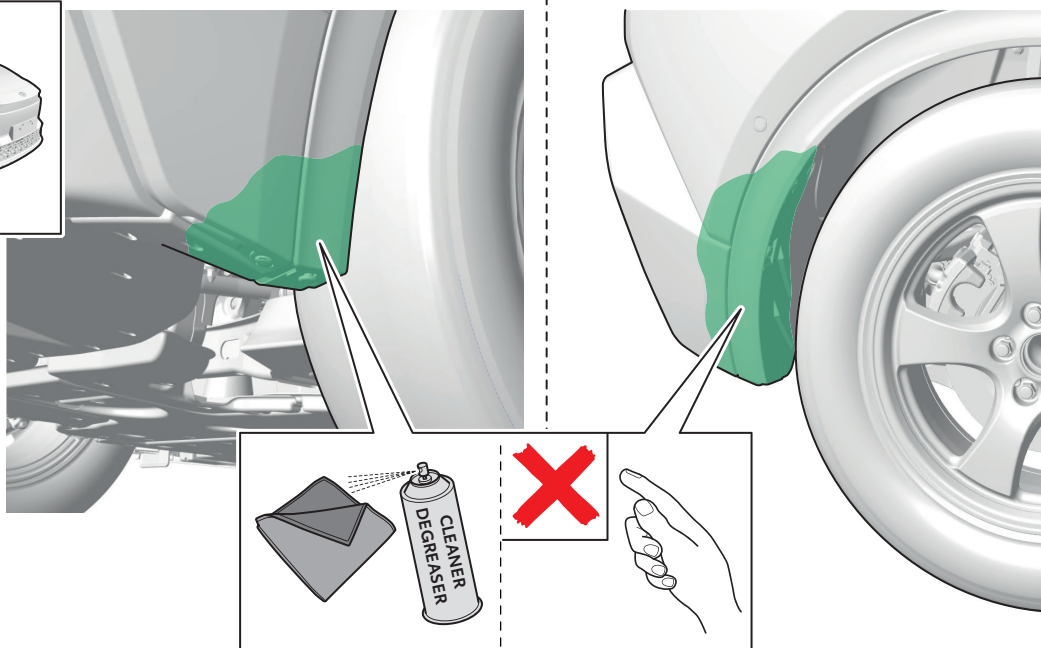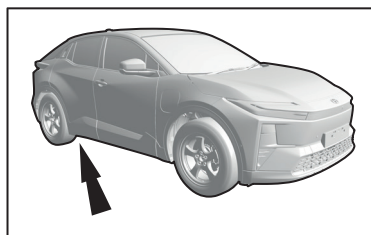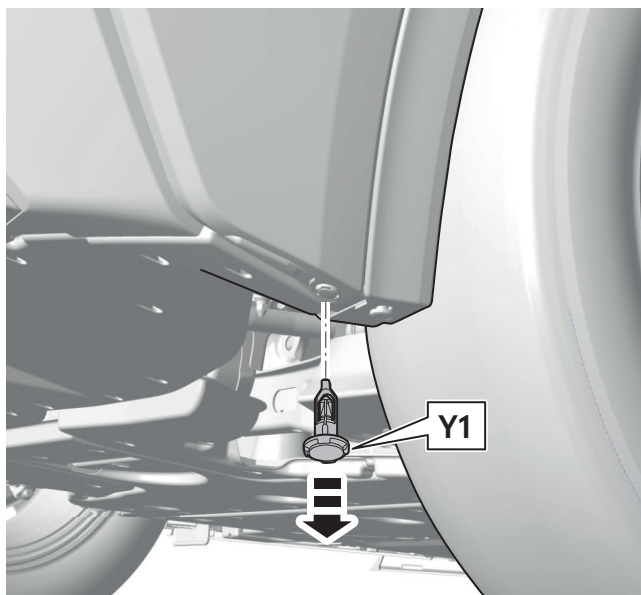


4

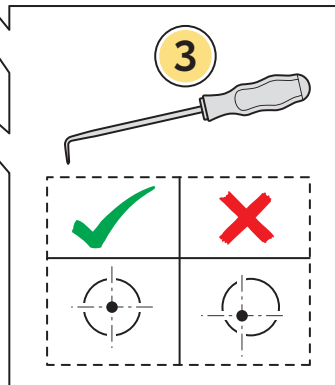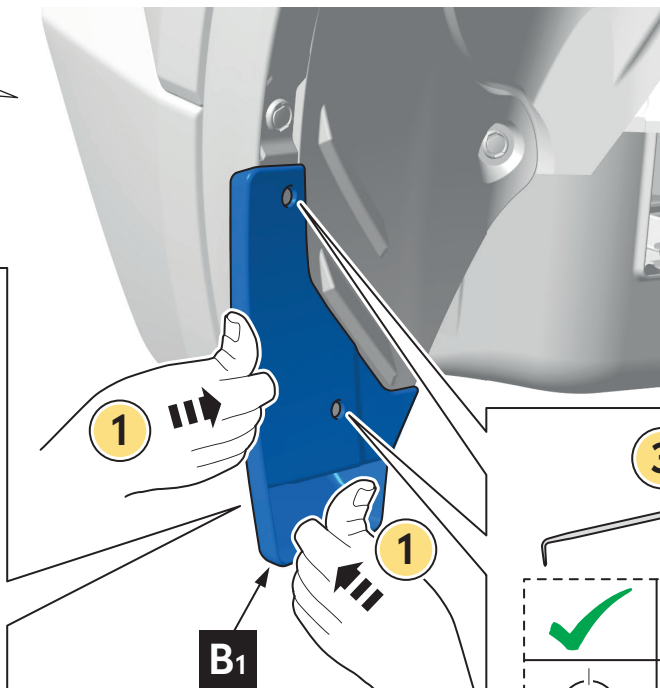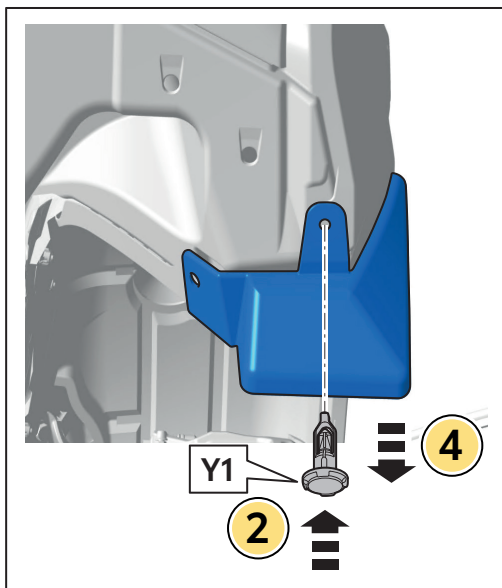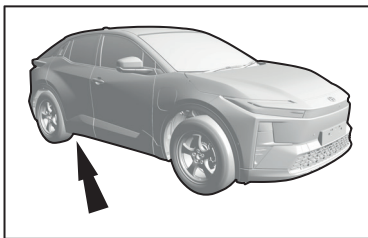

5

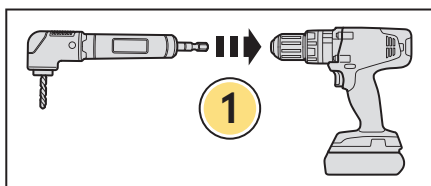
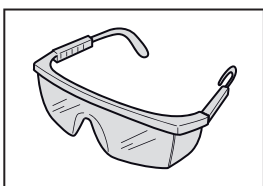
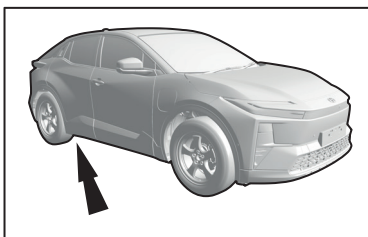


Cobalt Drill bits








2 Ø3 mm



3 Ø6 mm

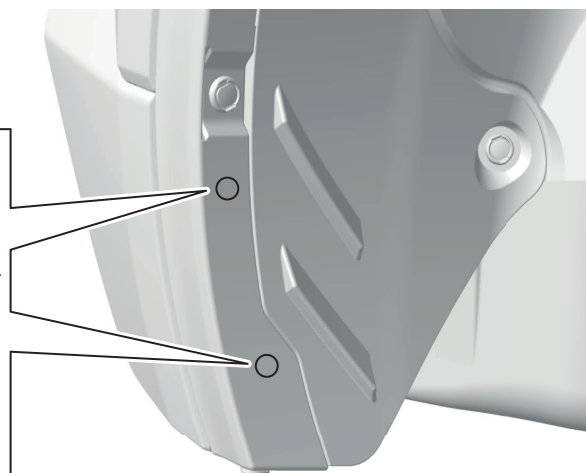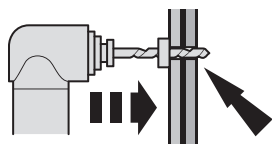





6

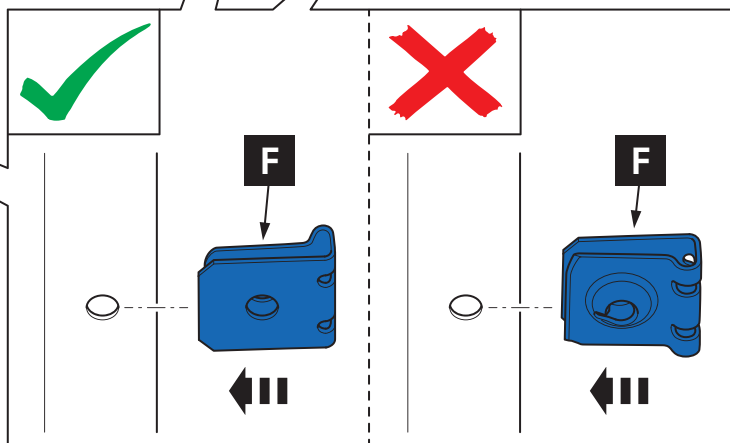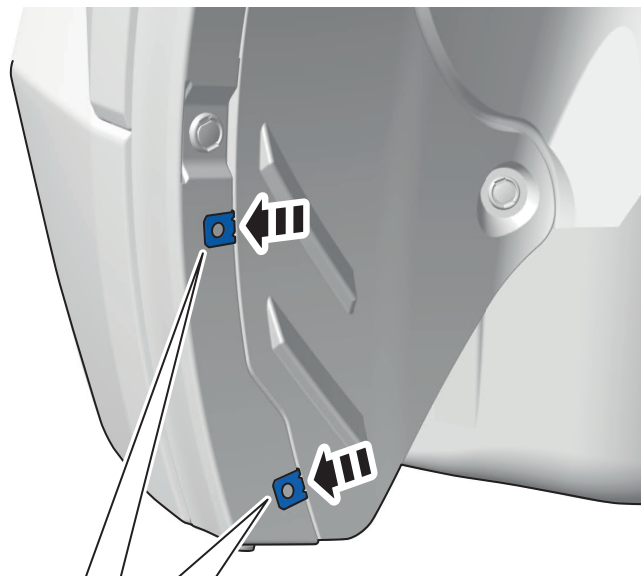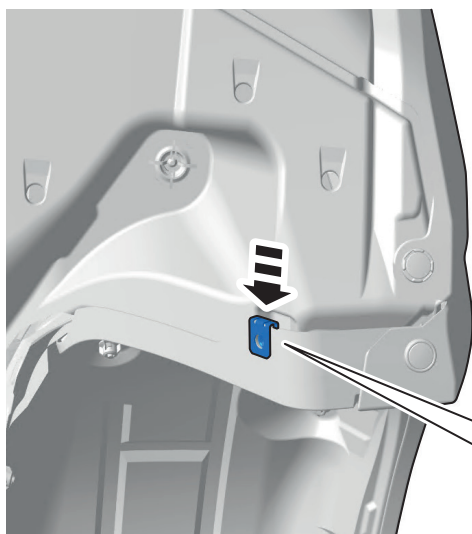

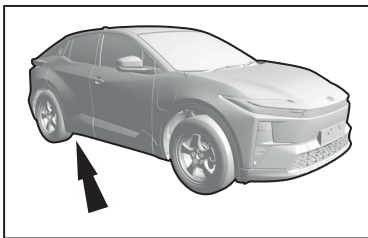


7



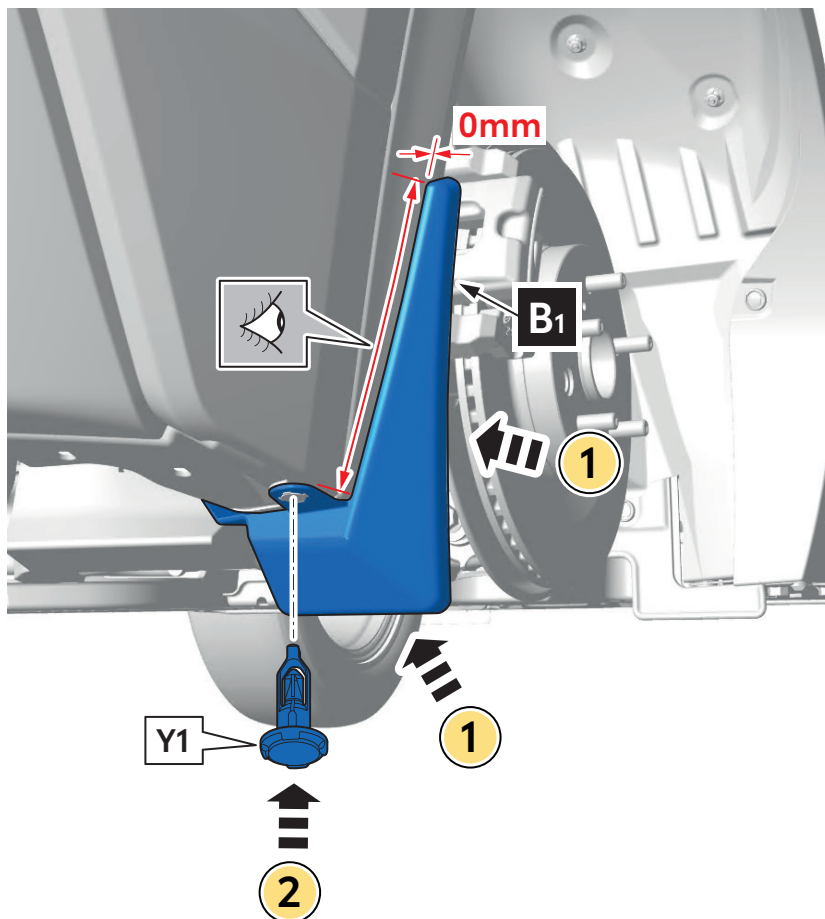
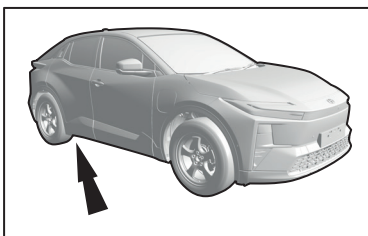


8


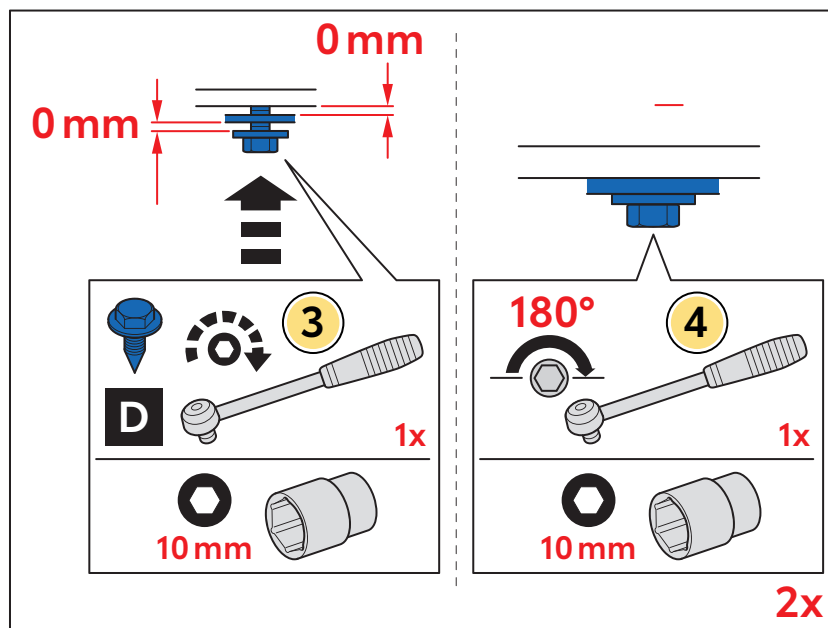
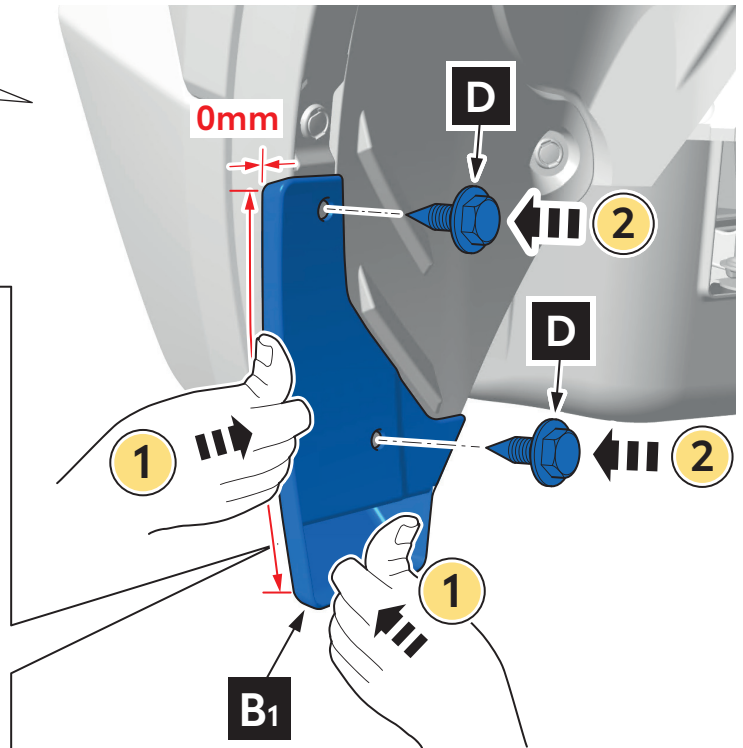
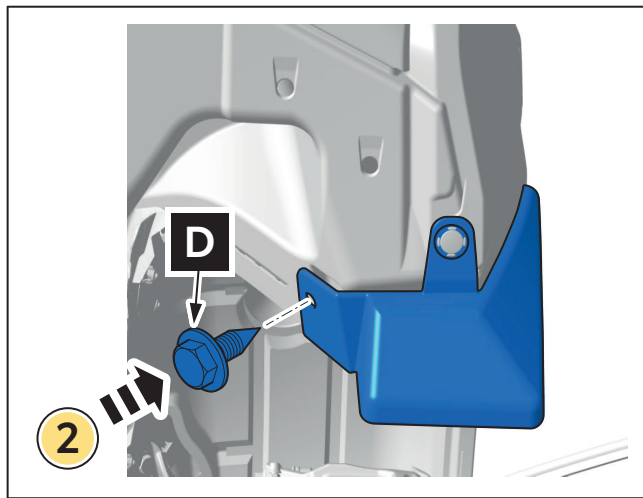
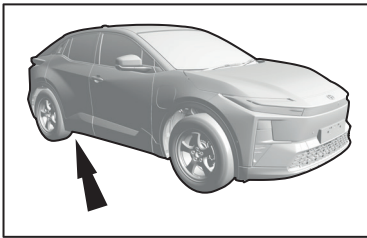


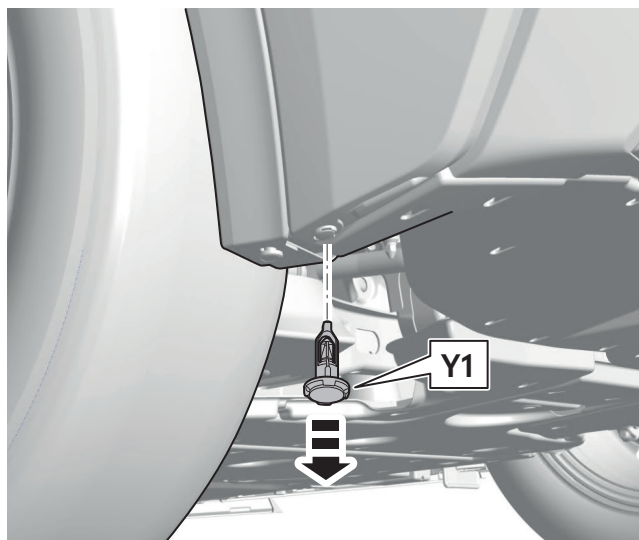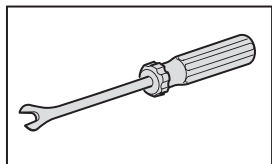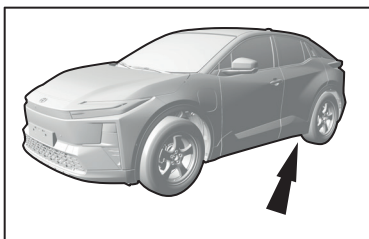






10

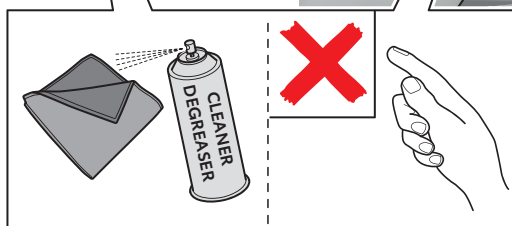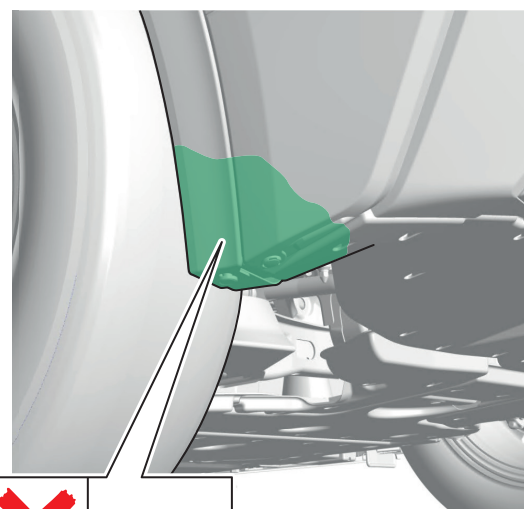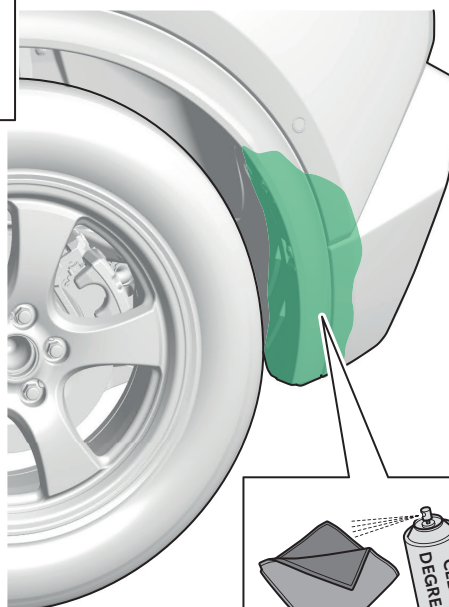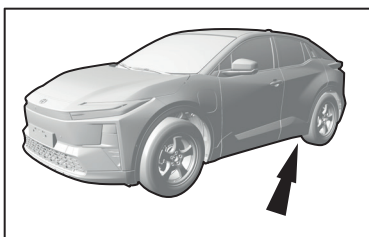






11

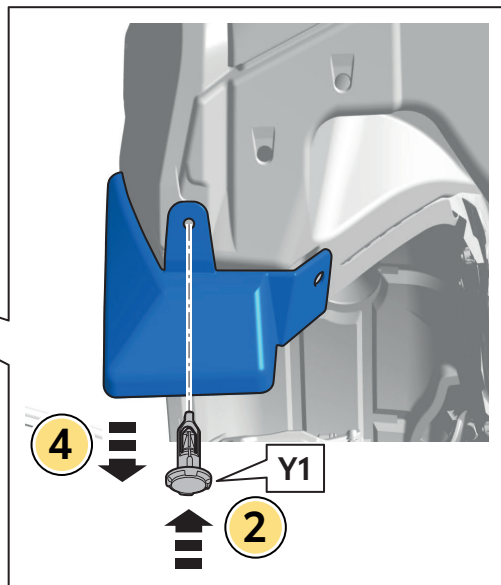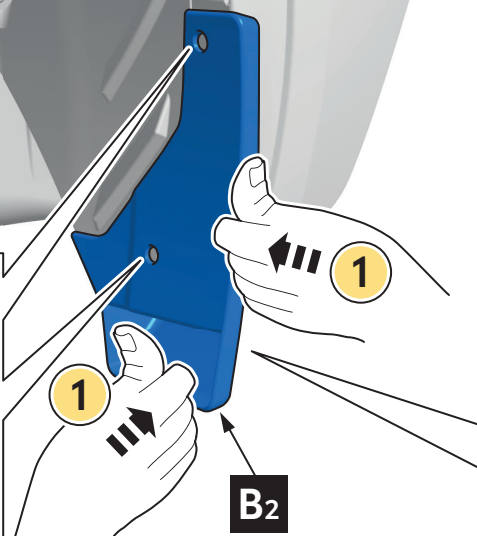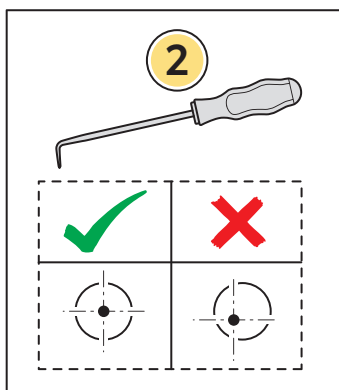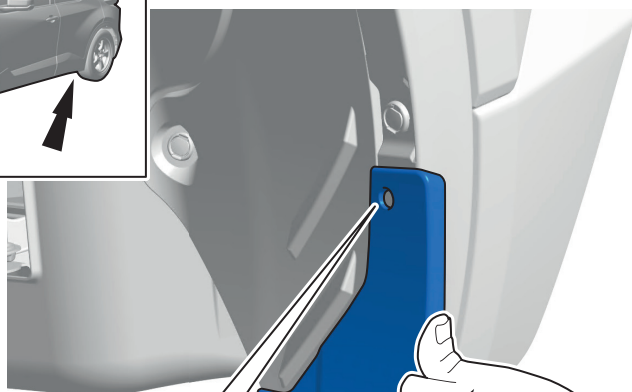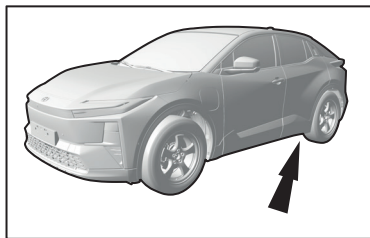



12

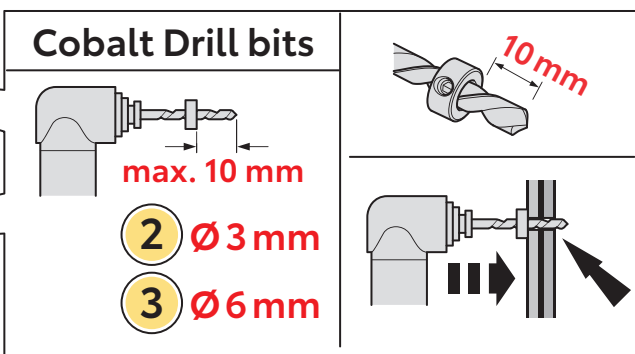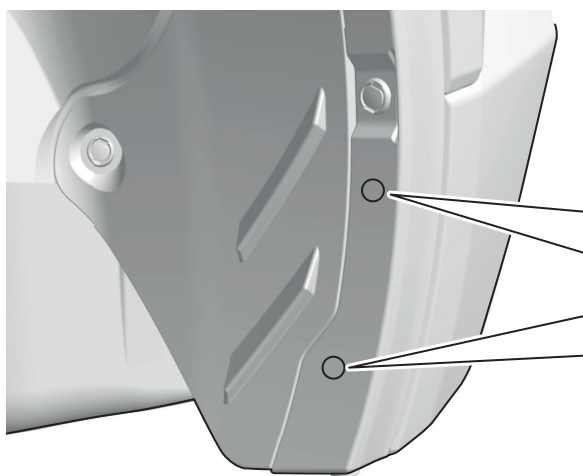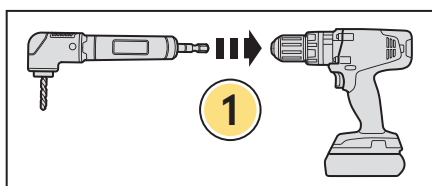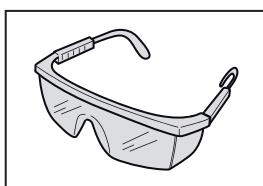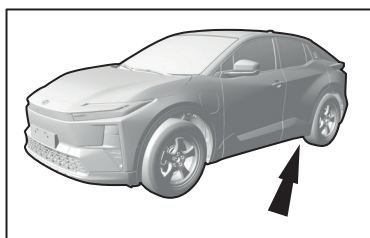





13

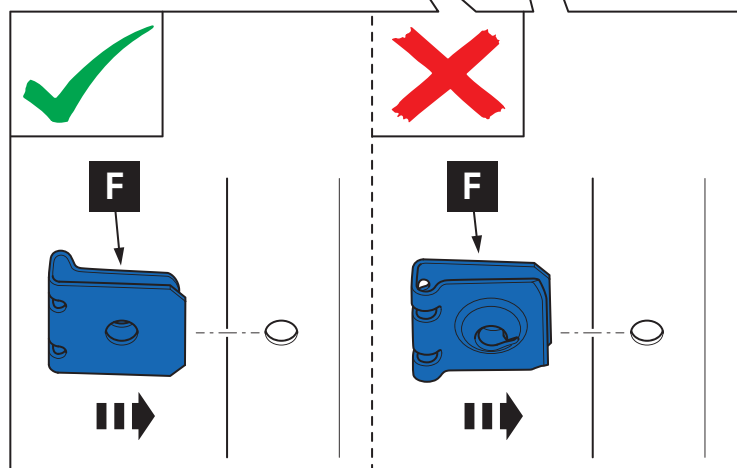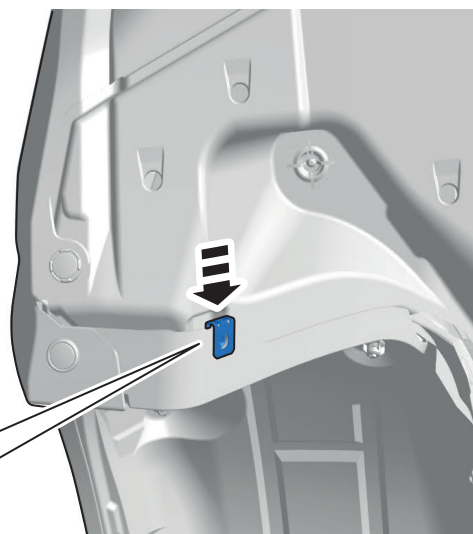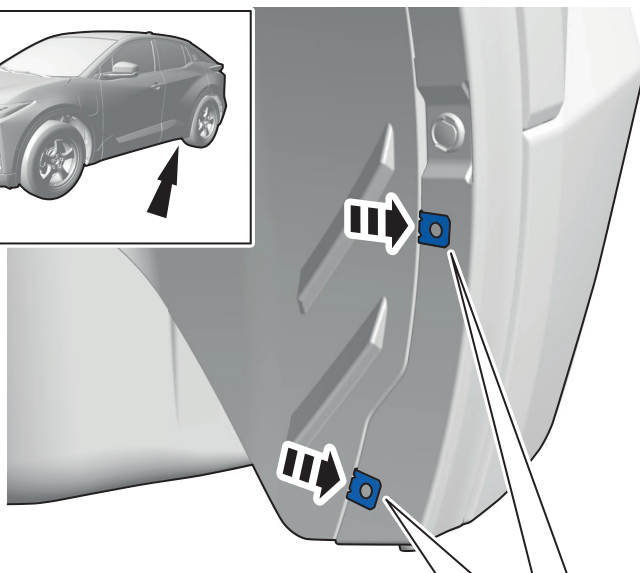
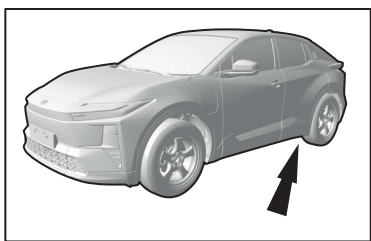


14

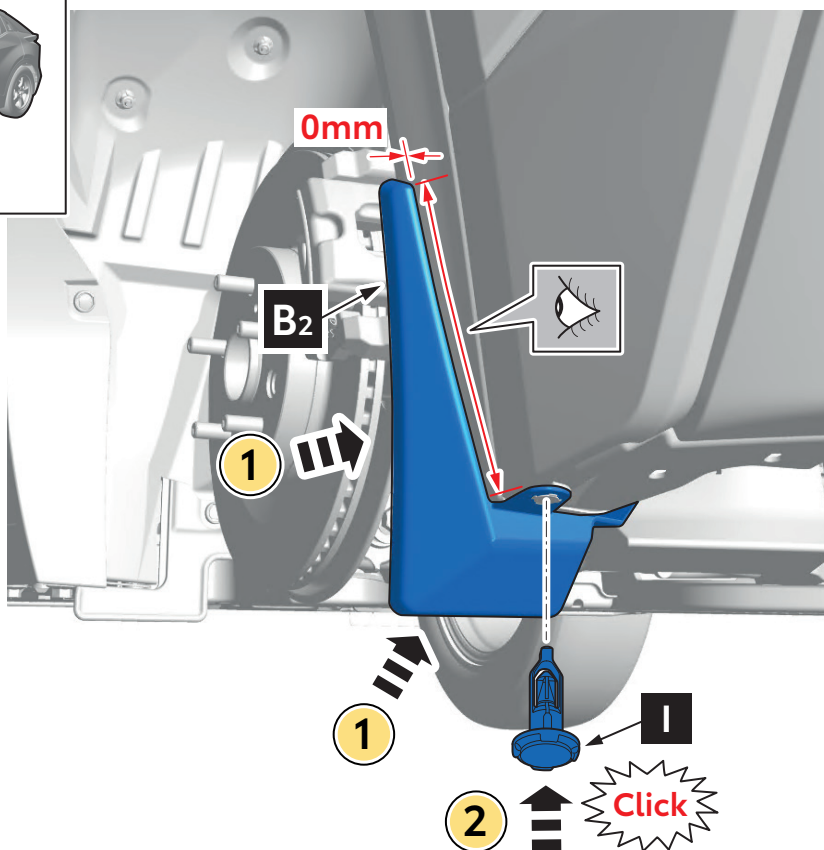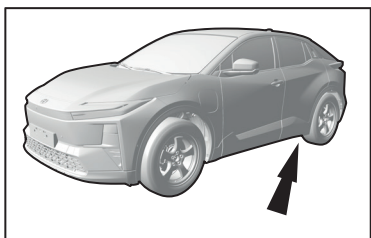


15

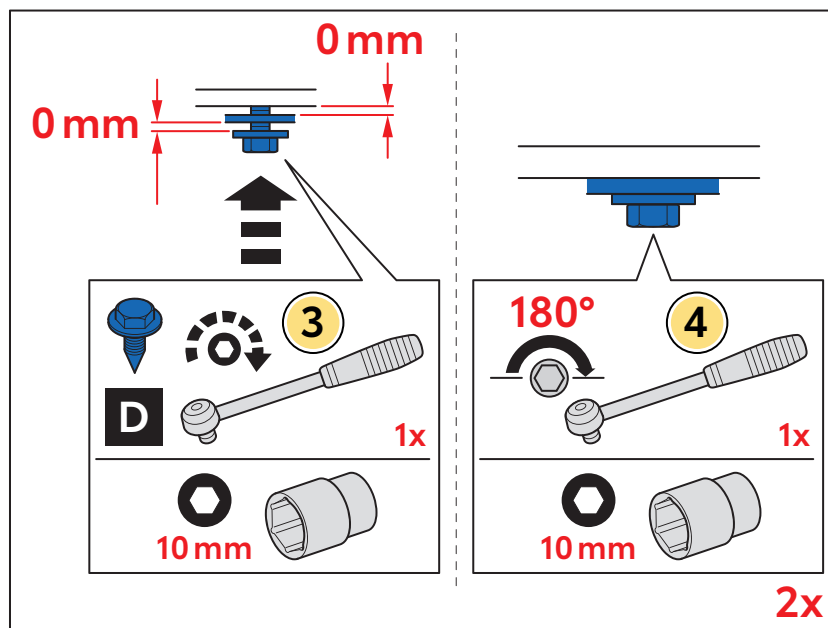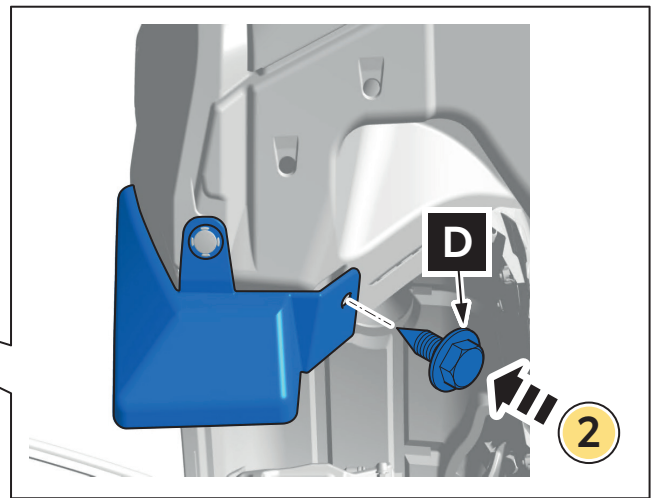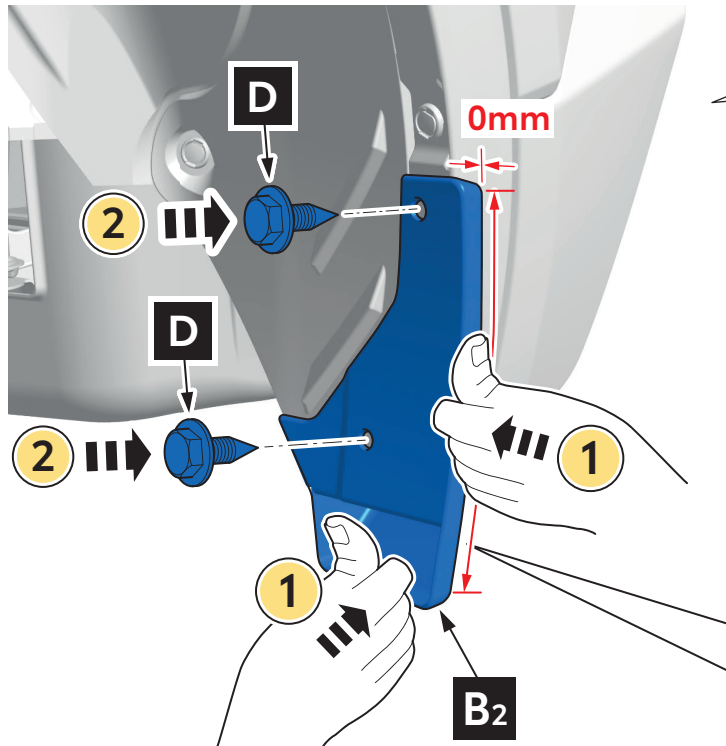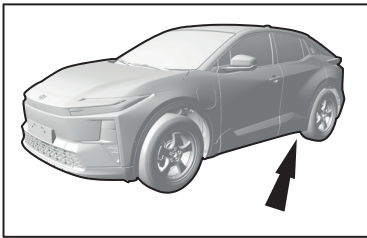


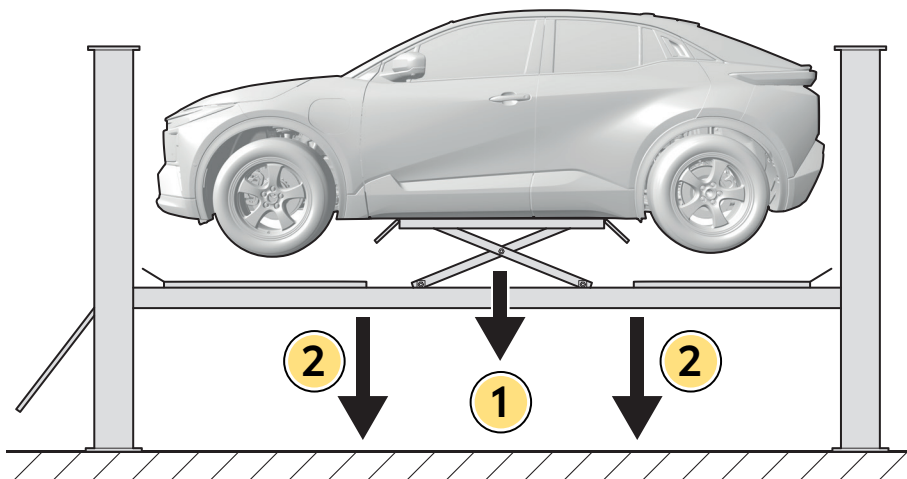
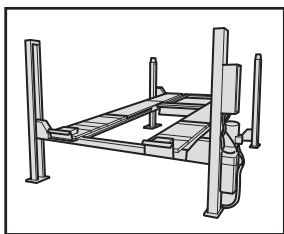


17




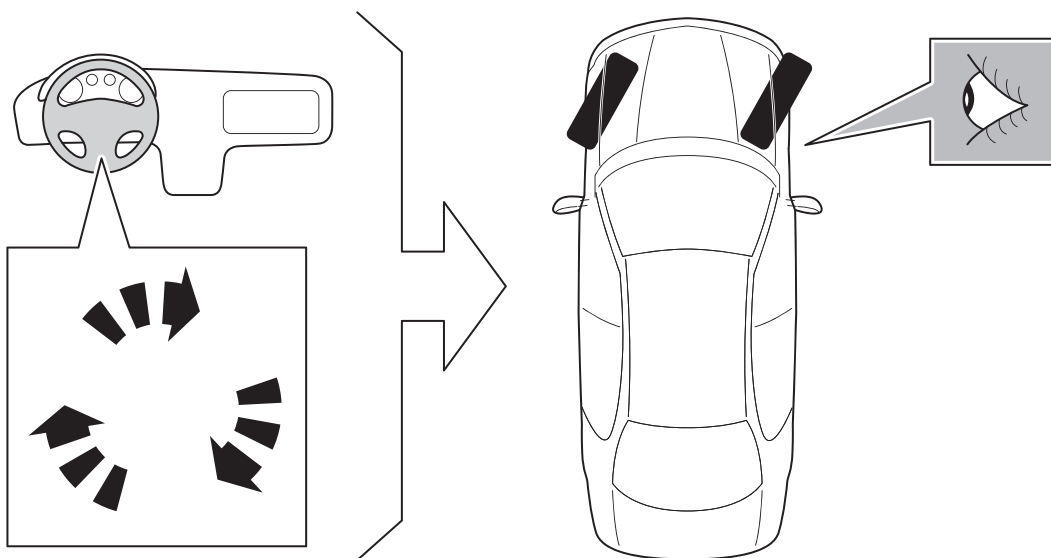


18





FRONT SET

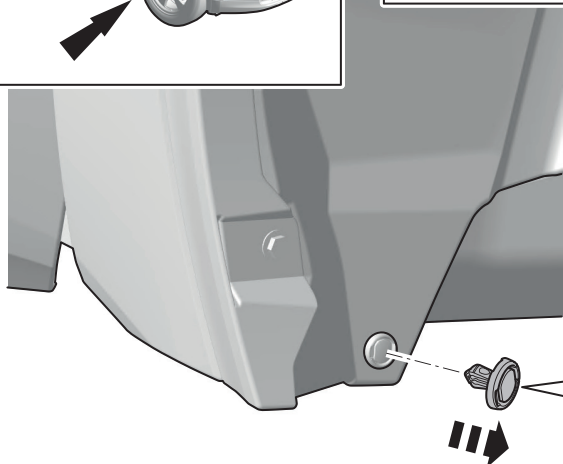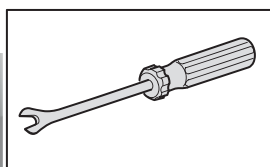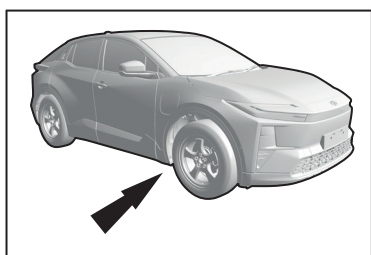






19

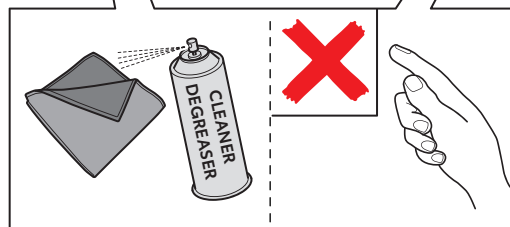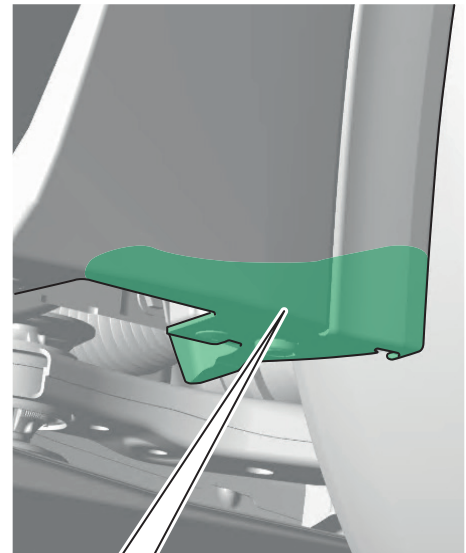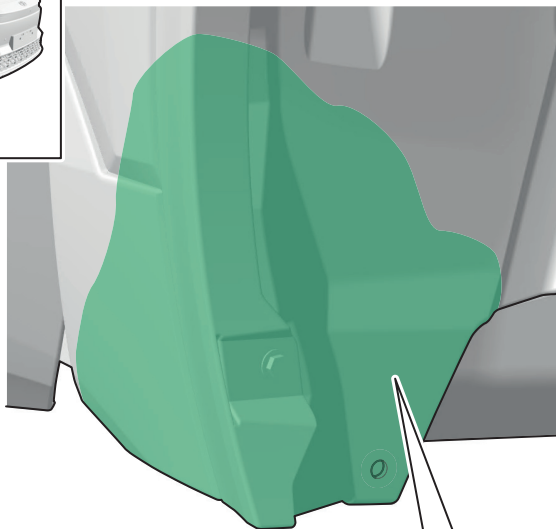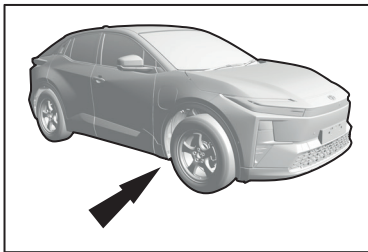




20

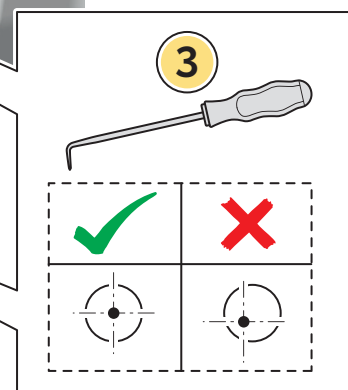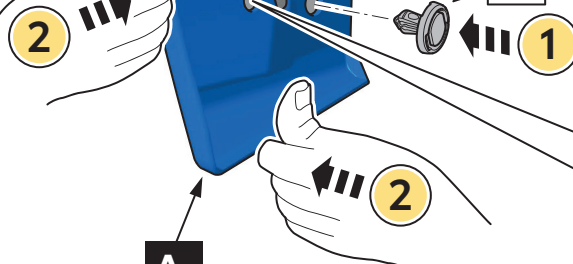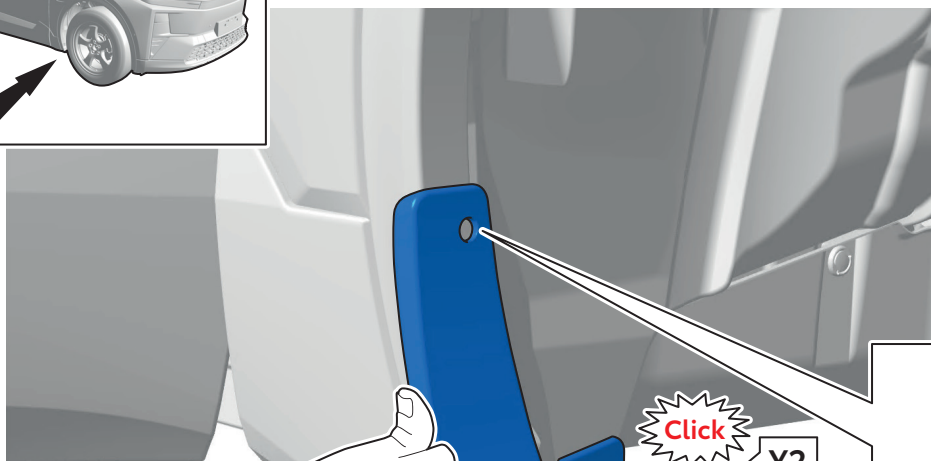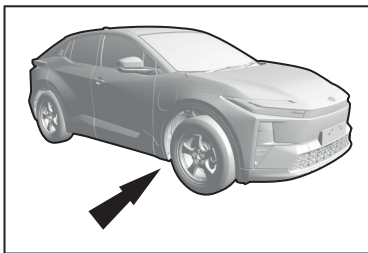






21

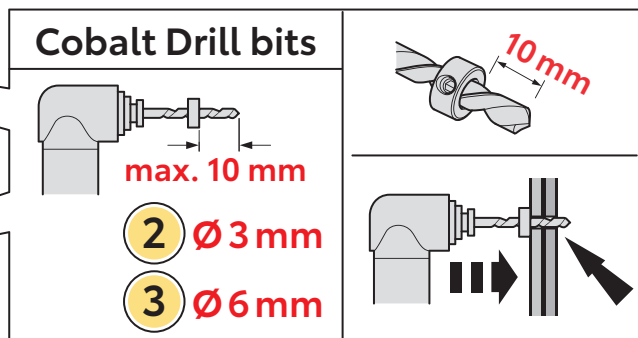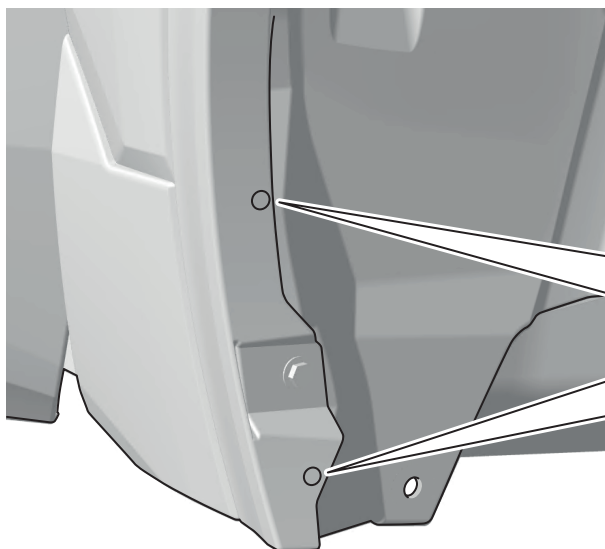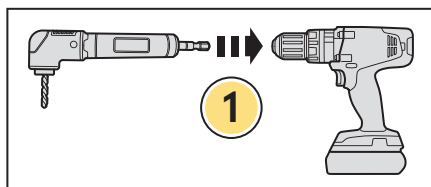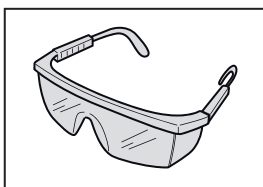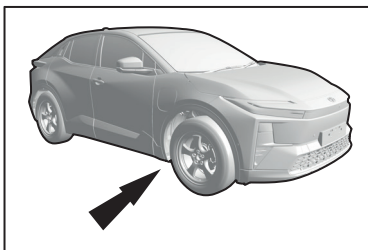




22

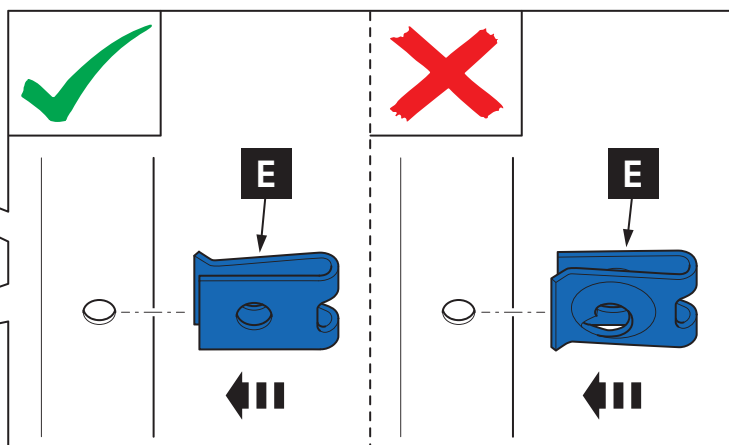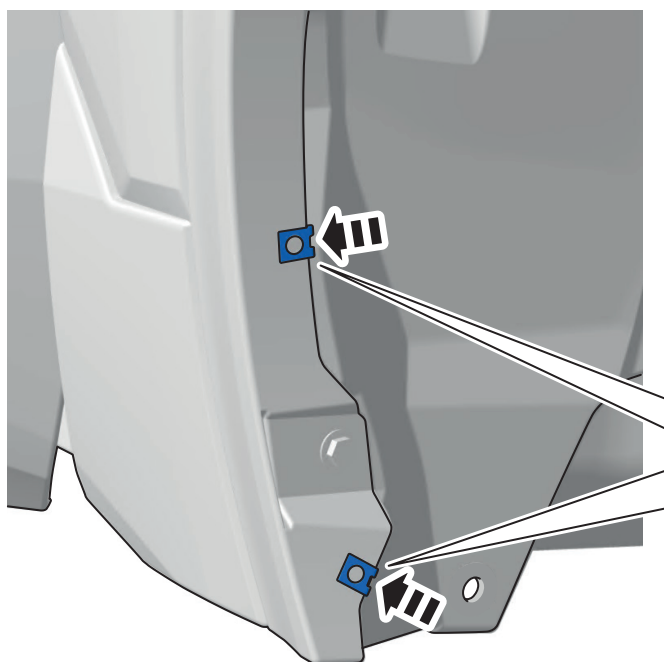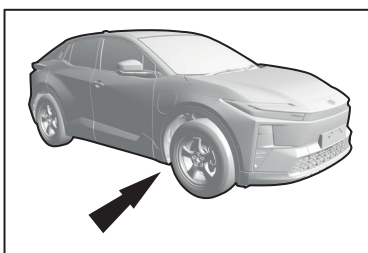



23

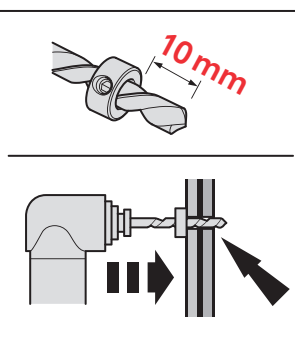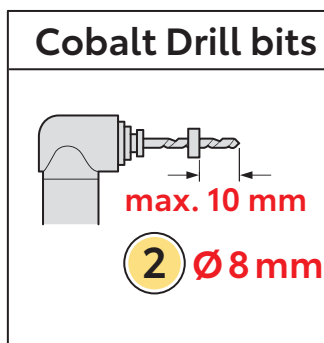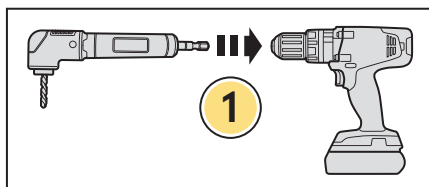
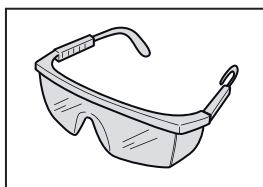
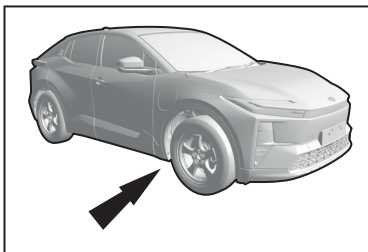



24

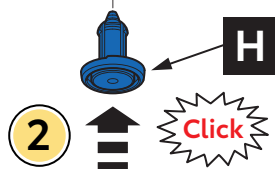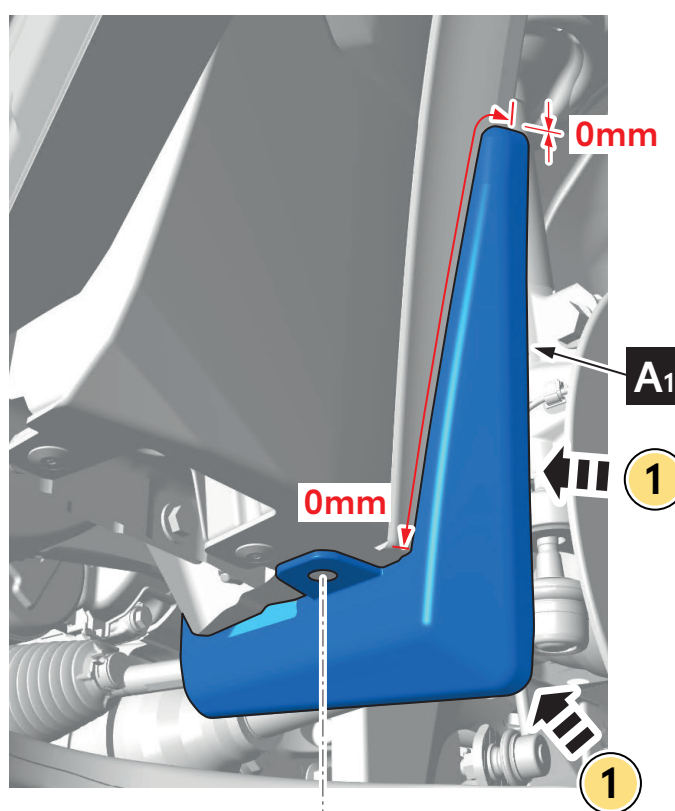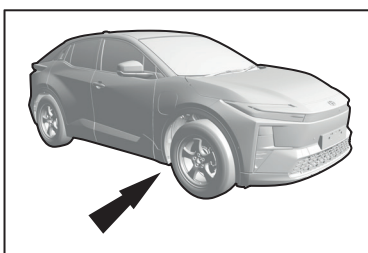





25

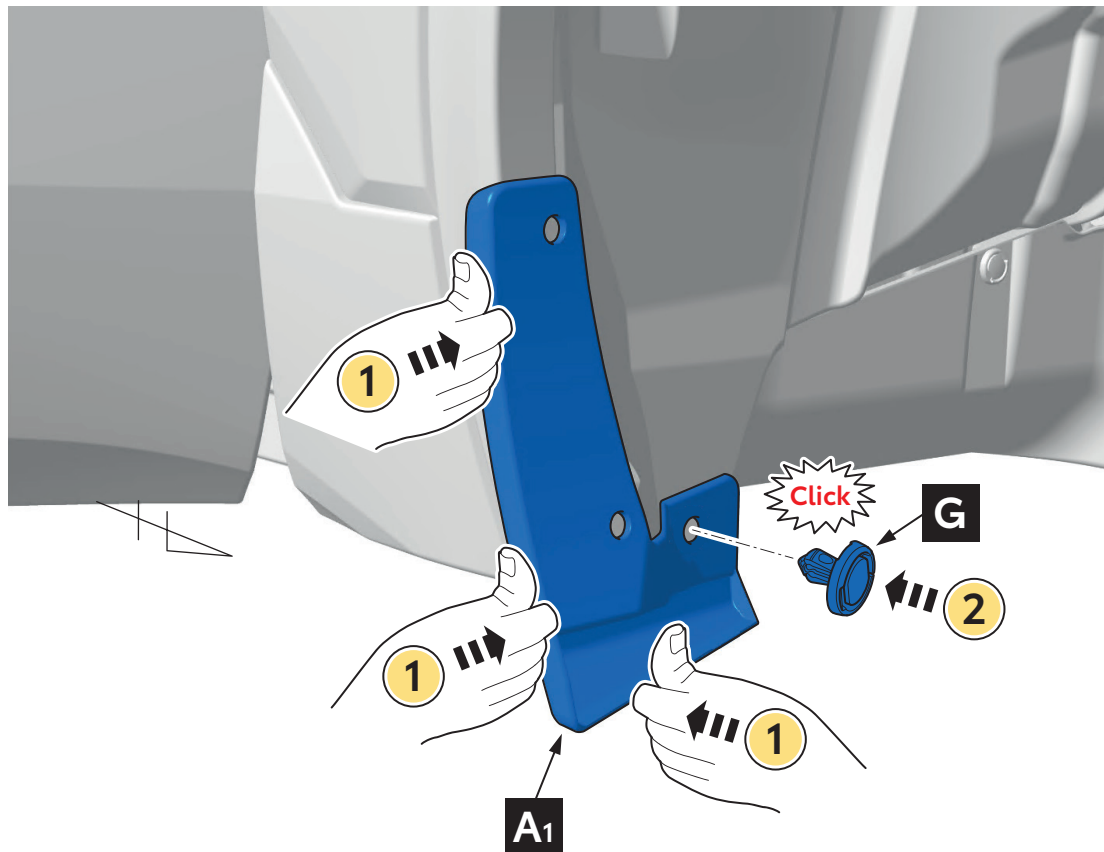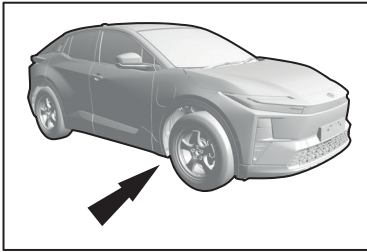


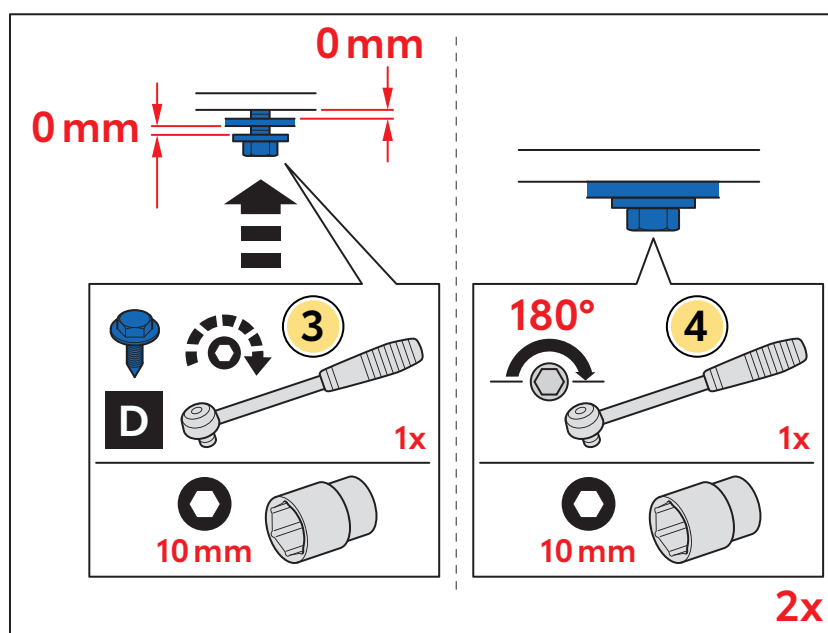
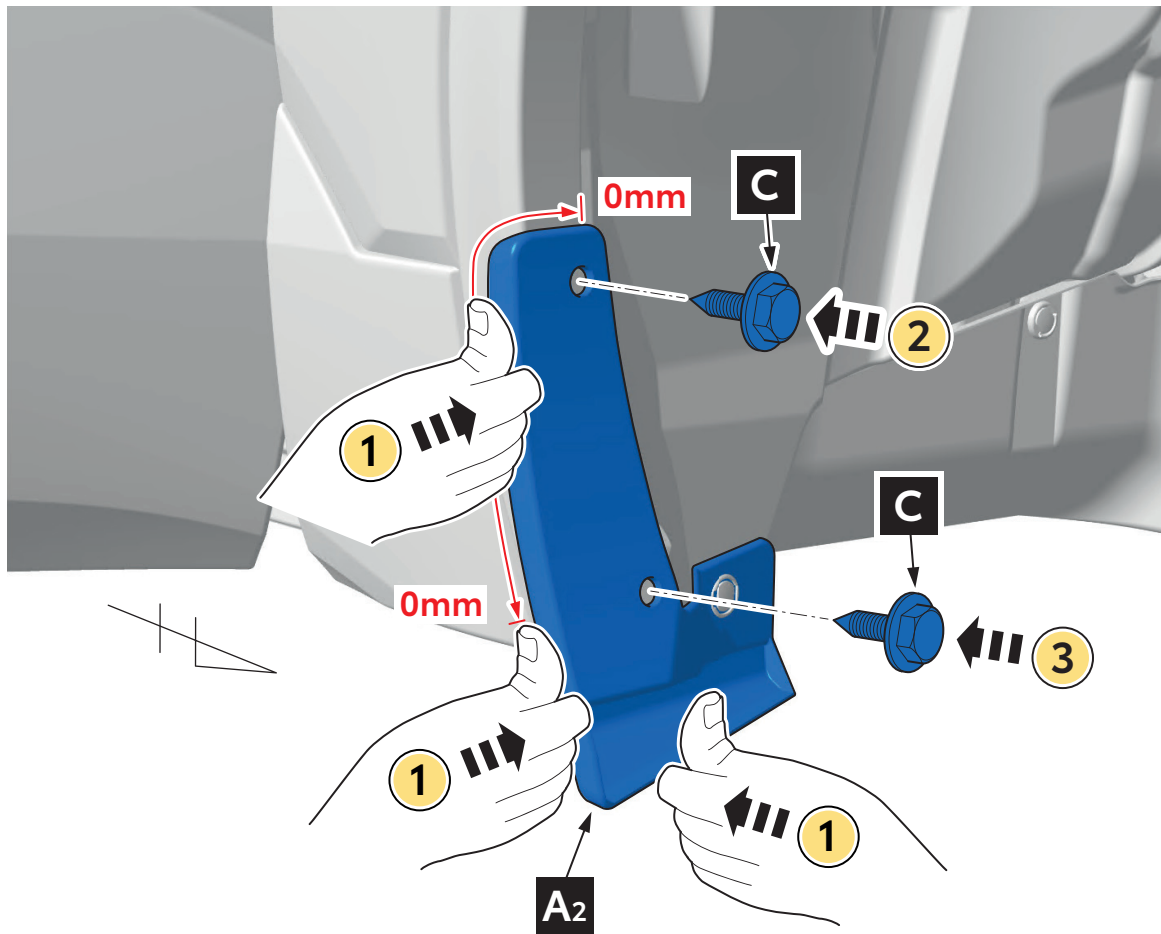
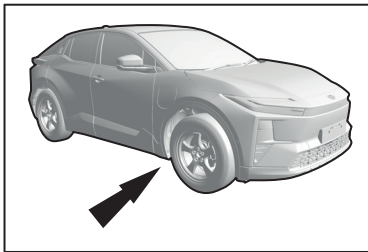


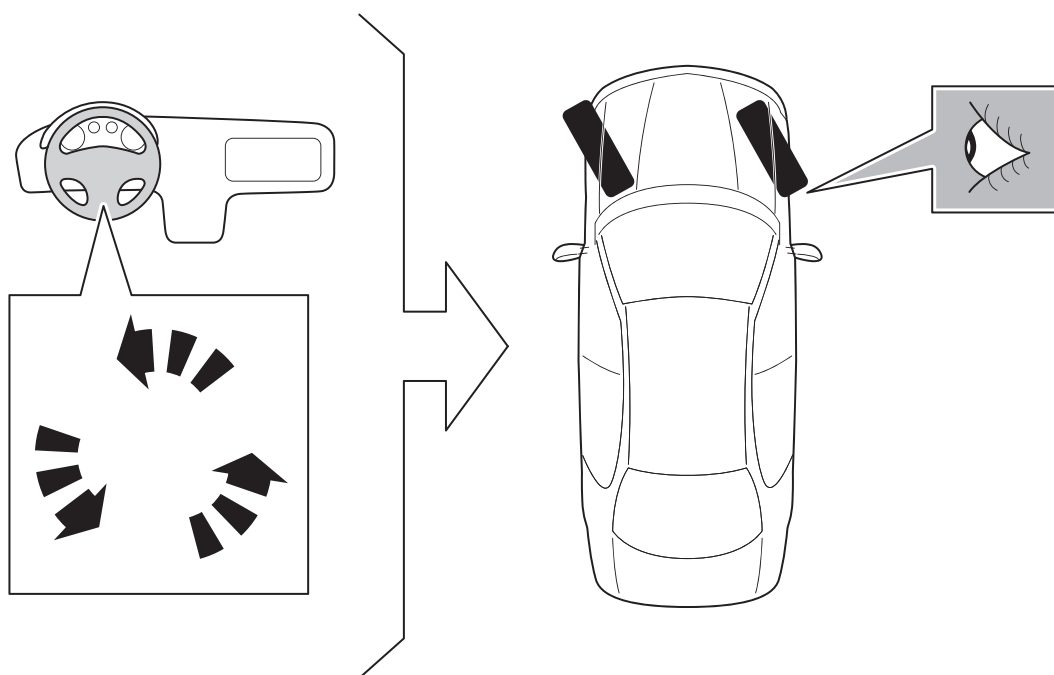




28

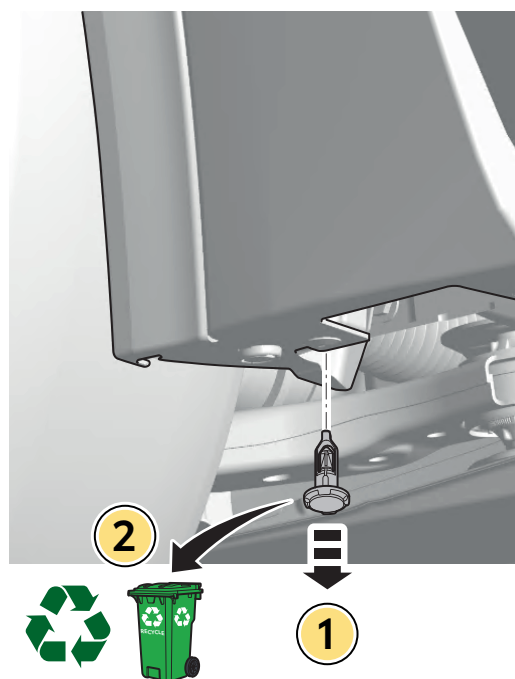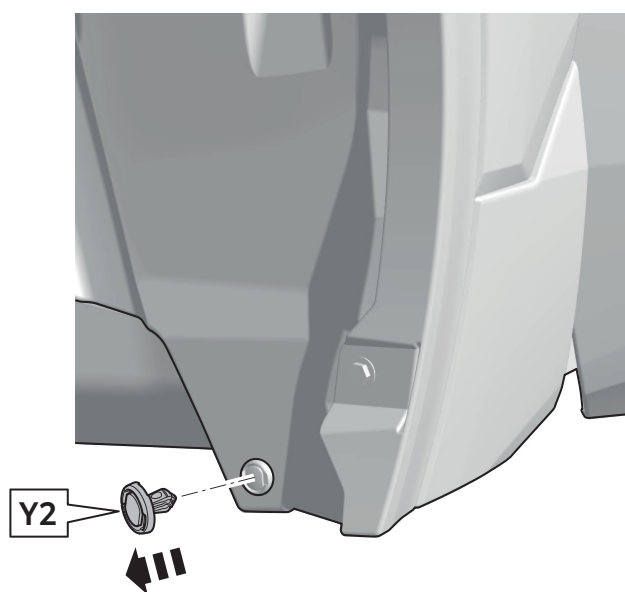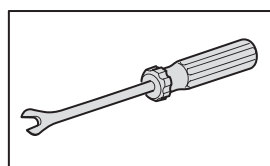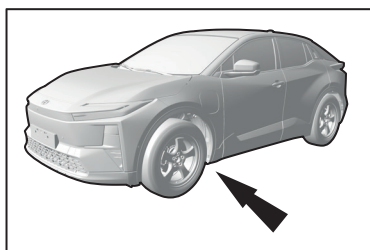




29

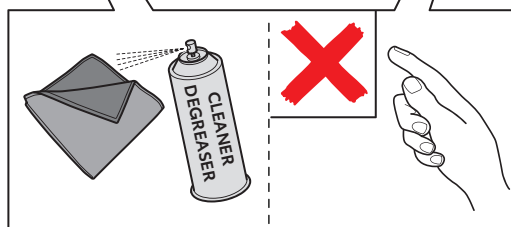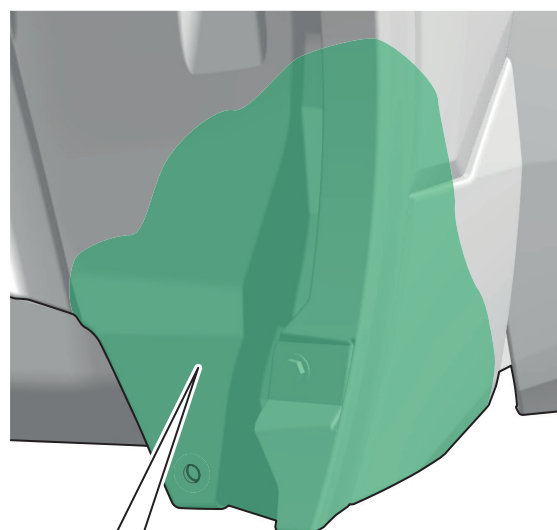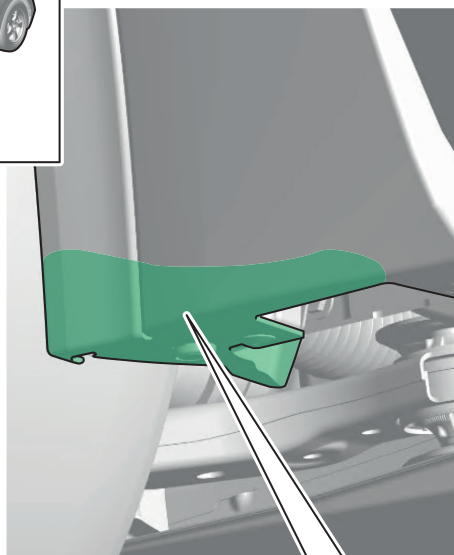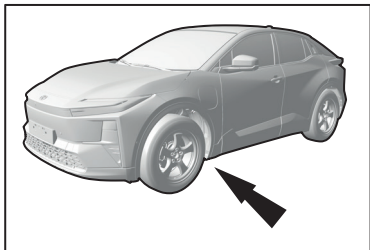


30

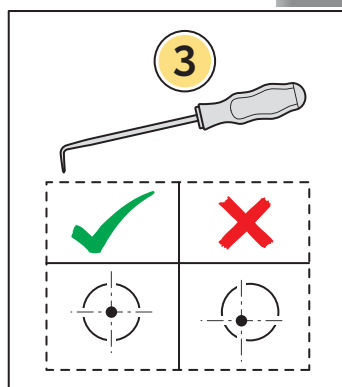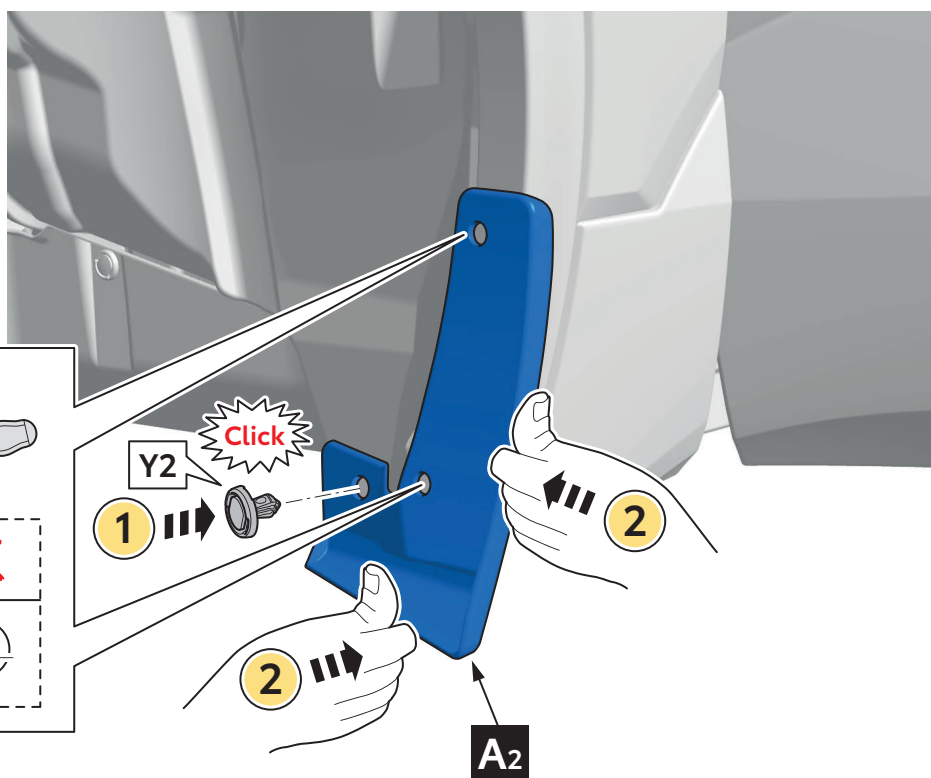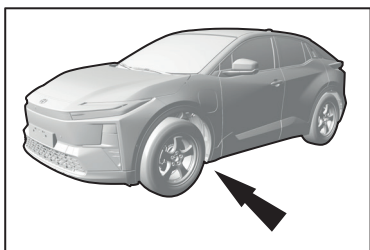

31

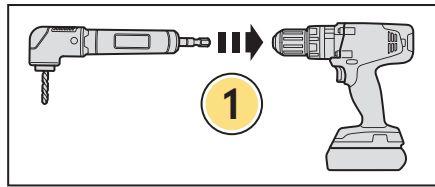
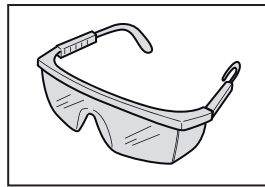
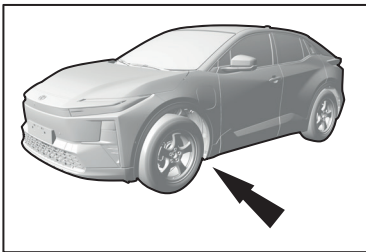


Cobalt Drill bits






2 Ø 3 mm





3 Ø 6 mm

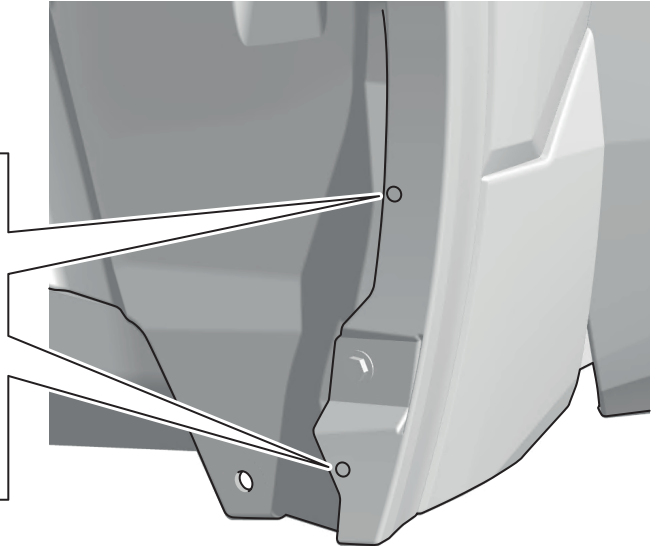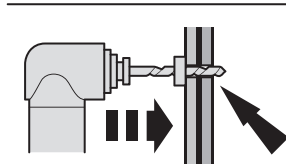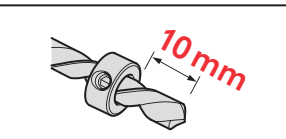




32

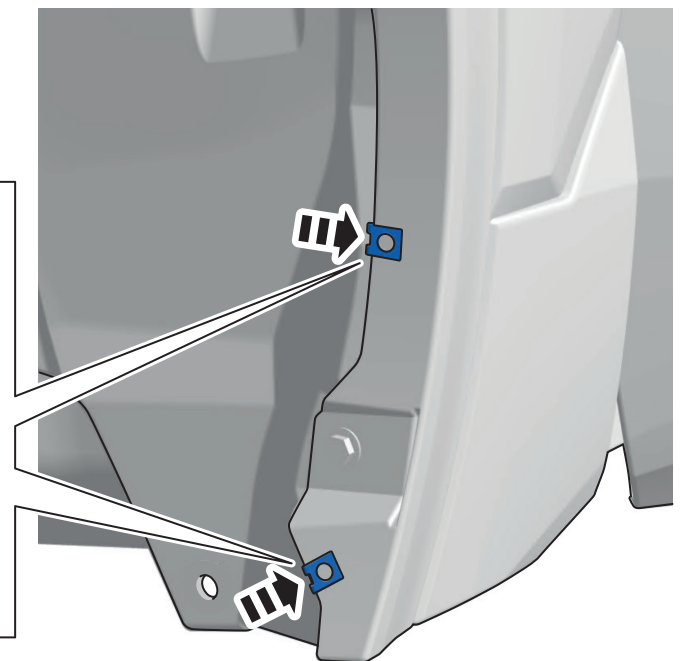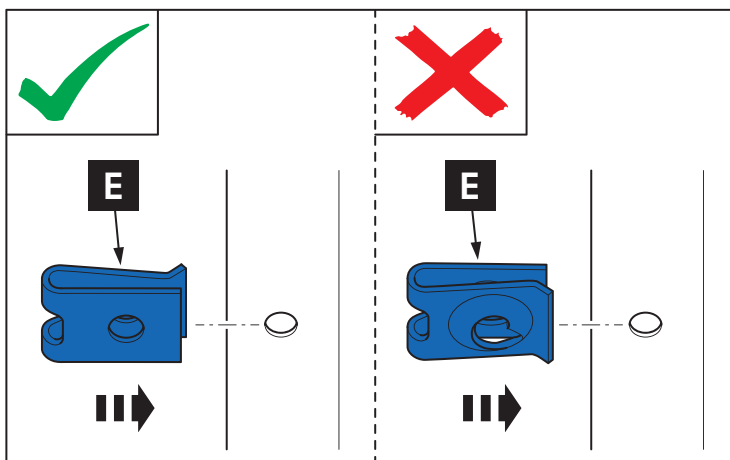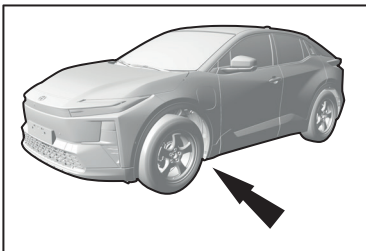




33

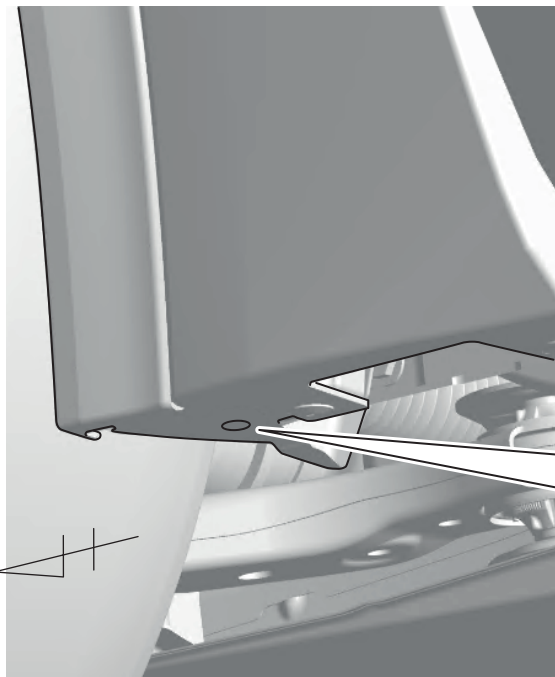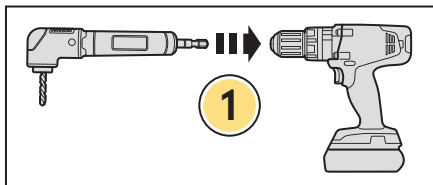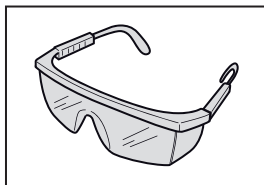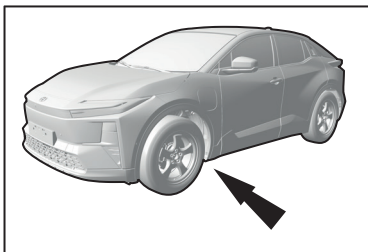



Cobalt Drill bits

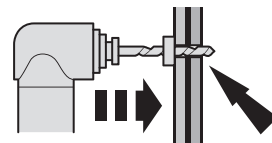

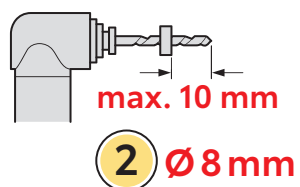



34

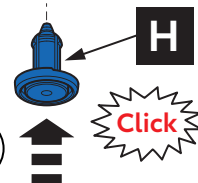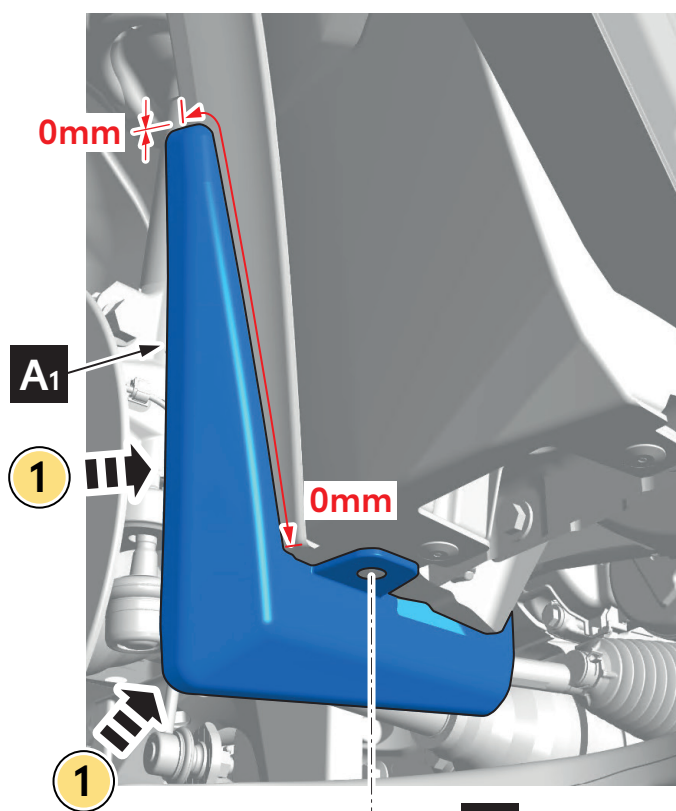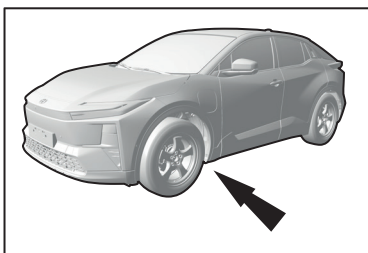

35

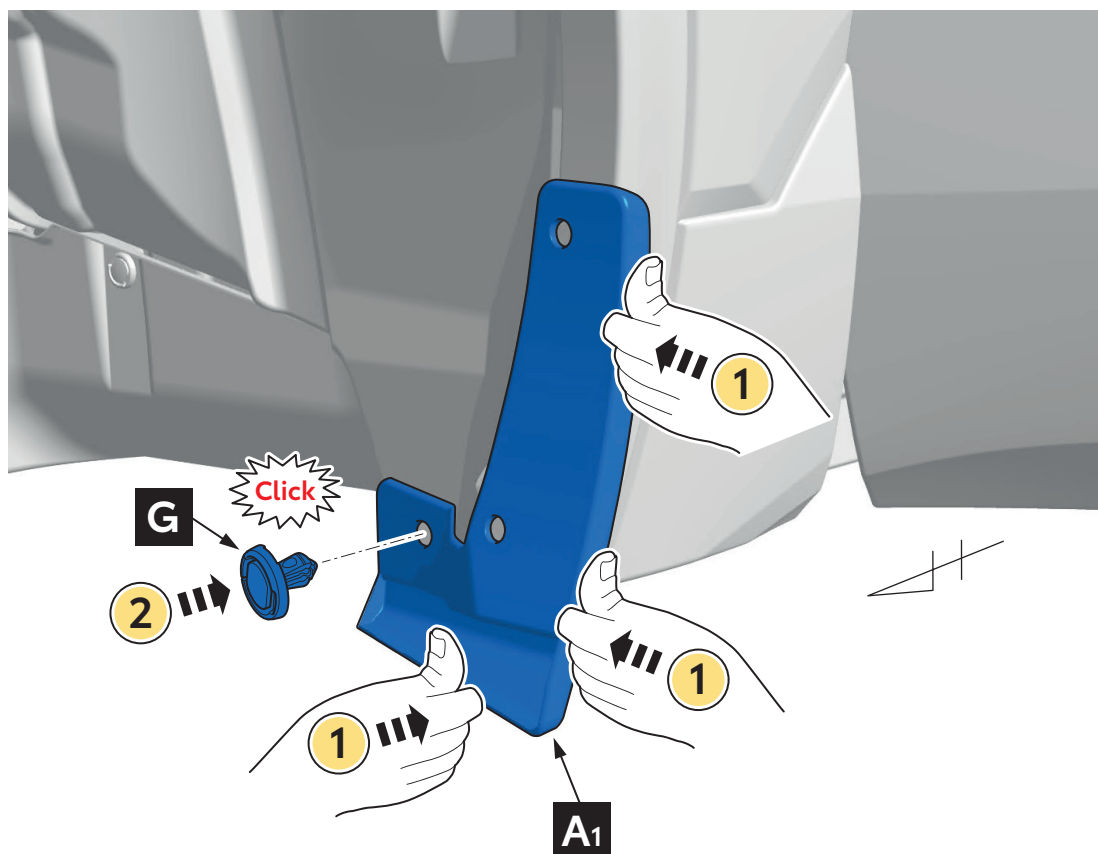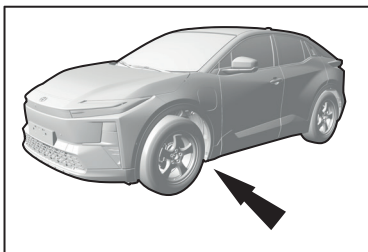

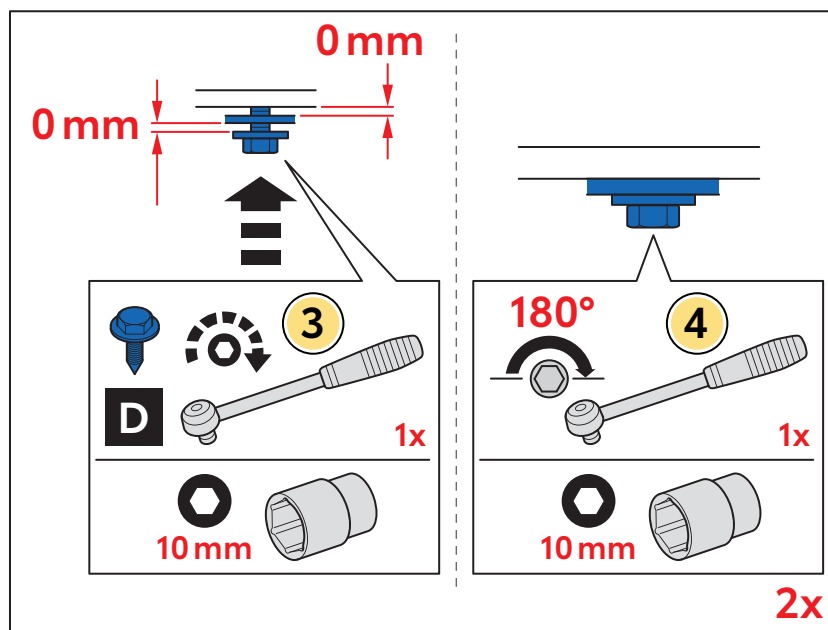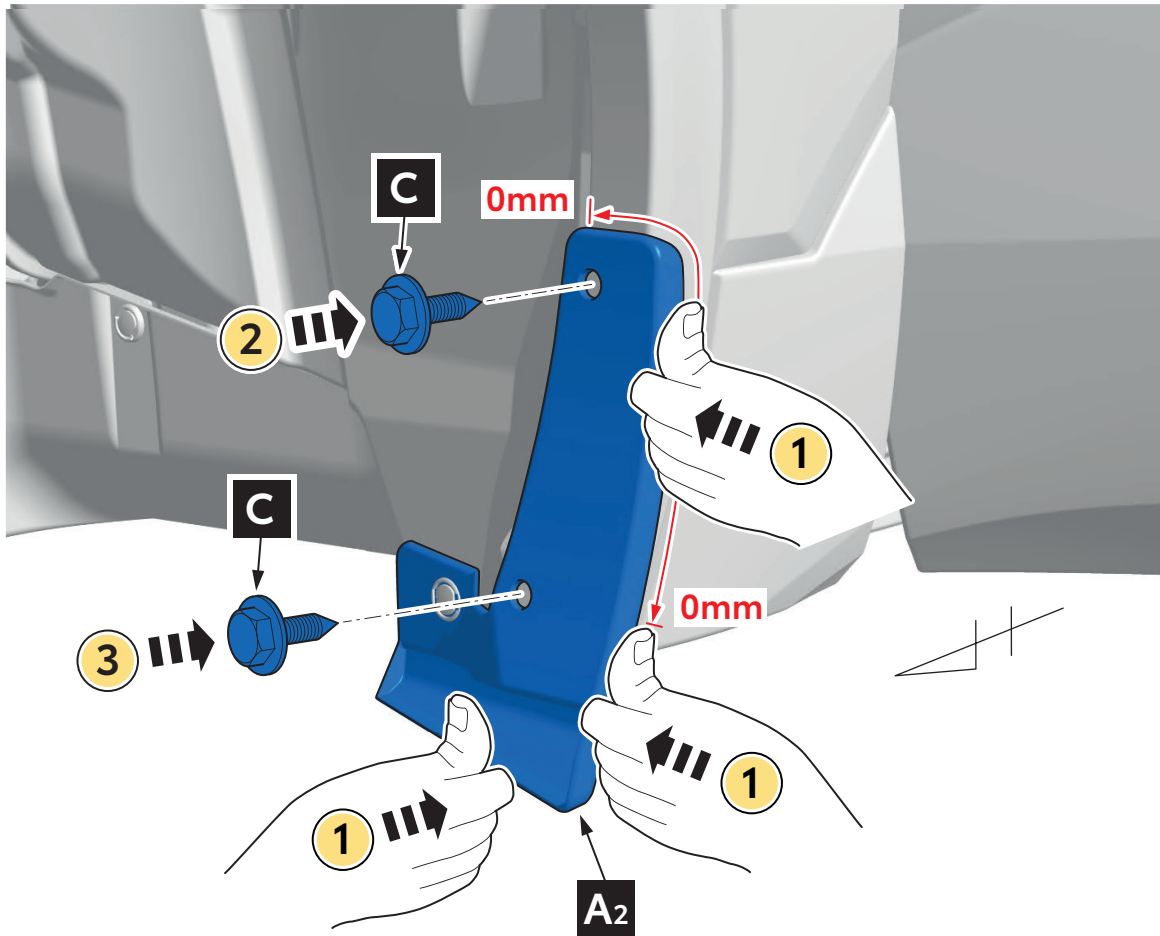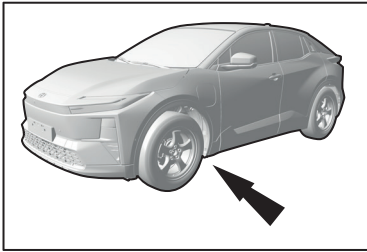

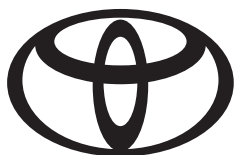

CHECK SHEET

Page 1 of 4

Model/Year TOYOTA C-HR +
As from 2025/12

Front & Rear
Set Mudflaps

VINn°


DURING INSTALLATION

1

 = OK

P/N = OK

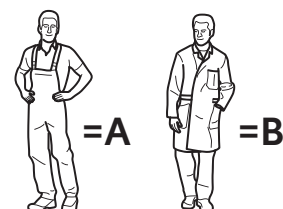


AFTER INSTALLATION










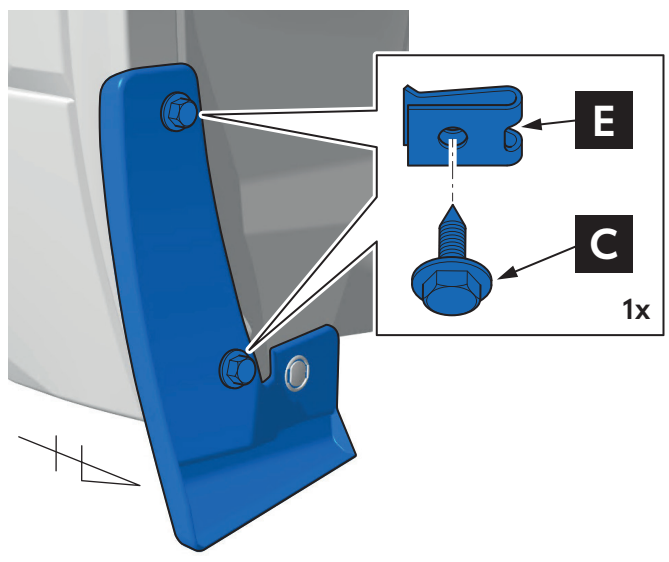

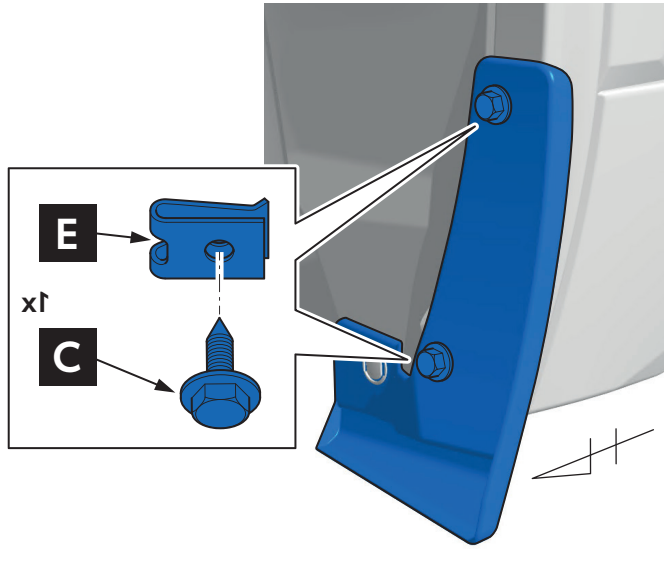


  = OK


  = OK

1



AFTER INSTALLATION


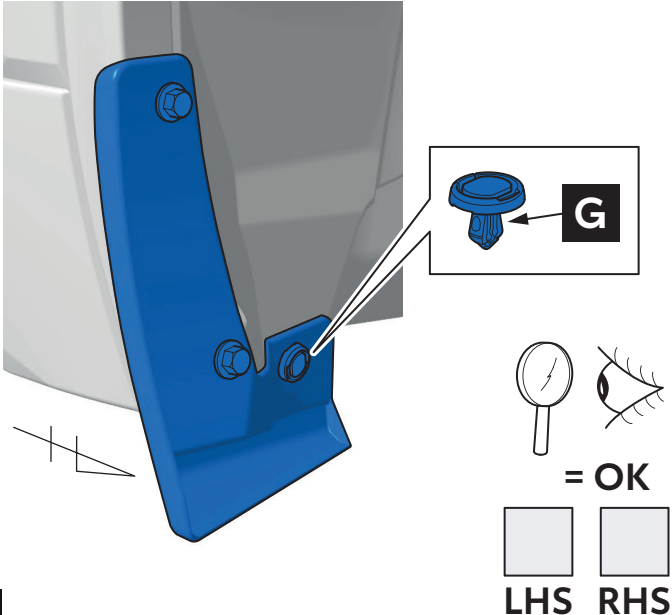
2

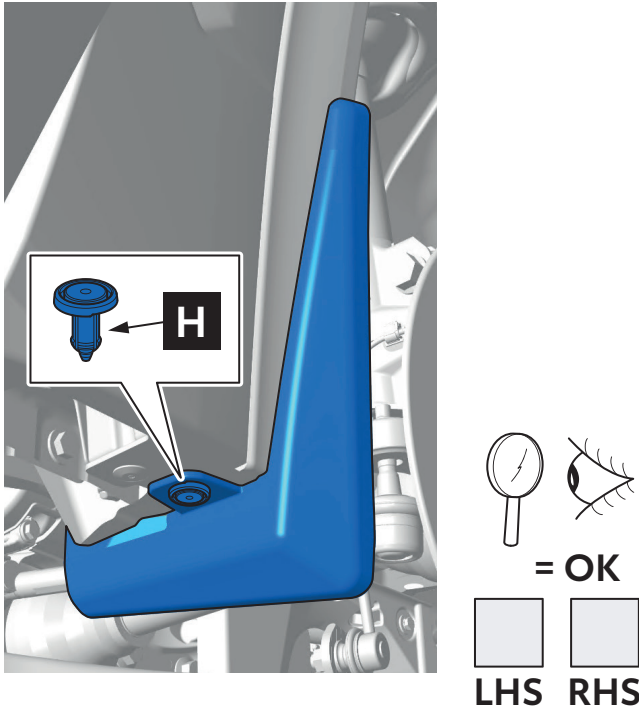

4

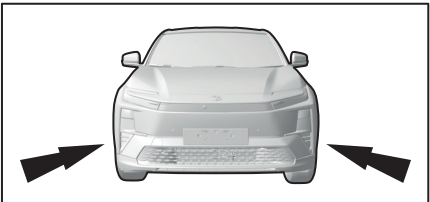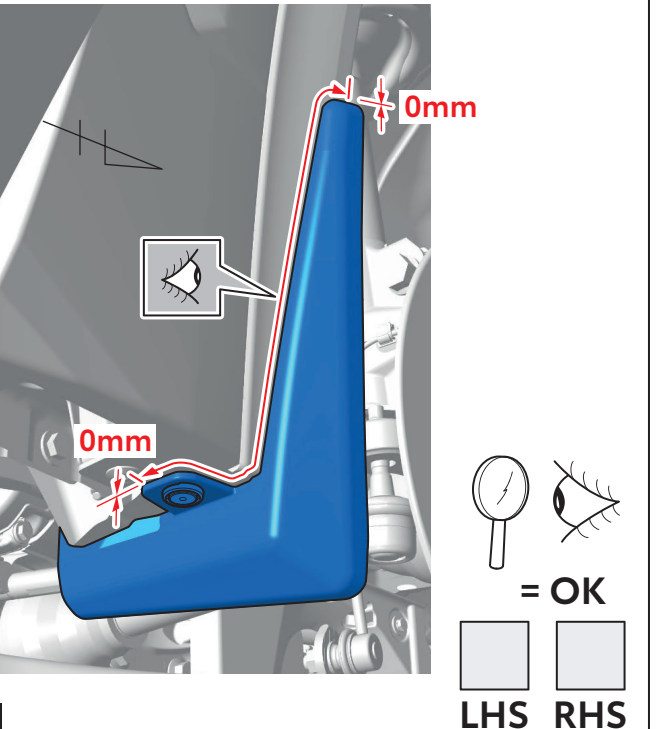



3

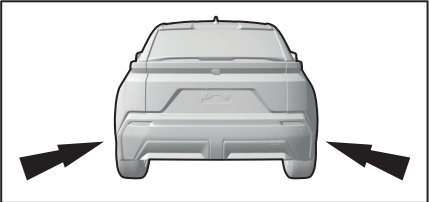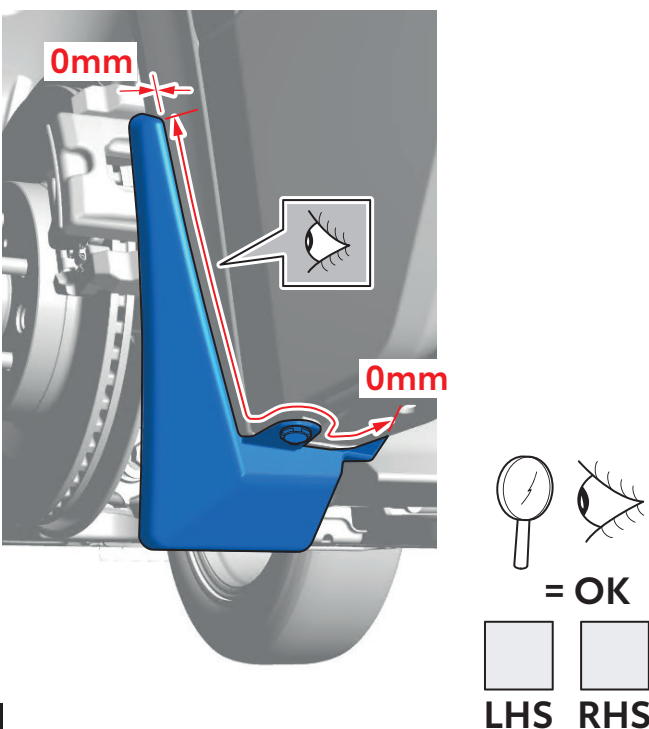4


AFTER INSTALLATION

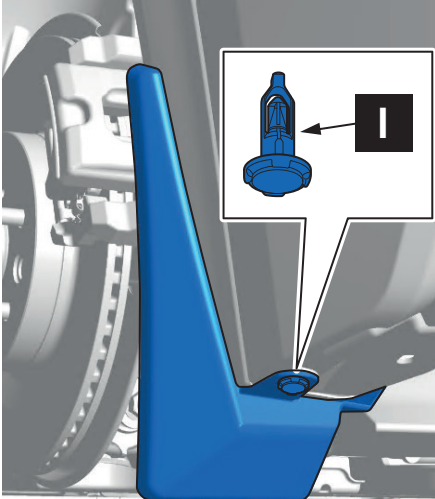

5






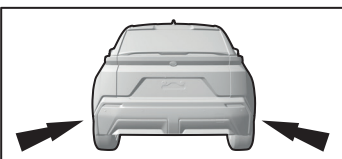





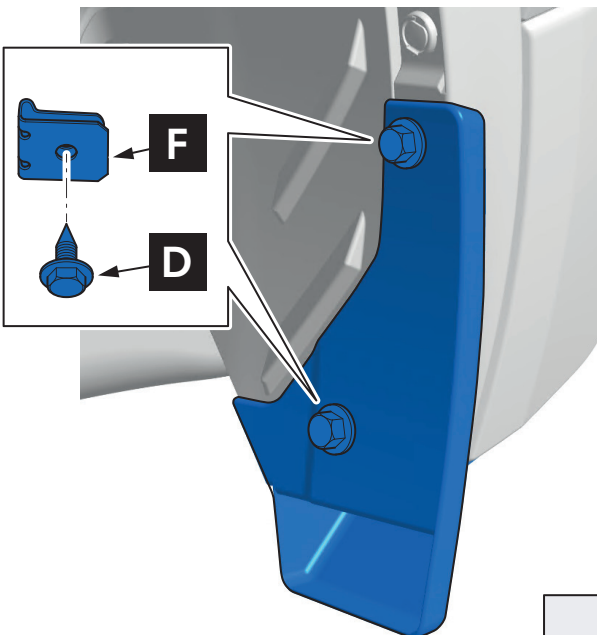



6

AFTER INSTALLATION















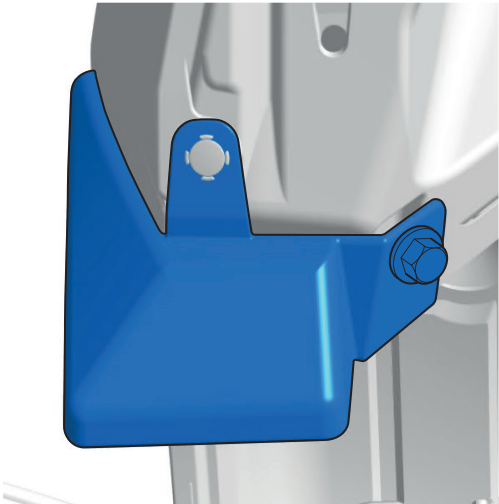


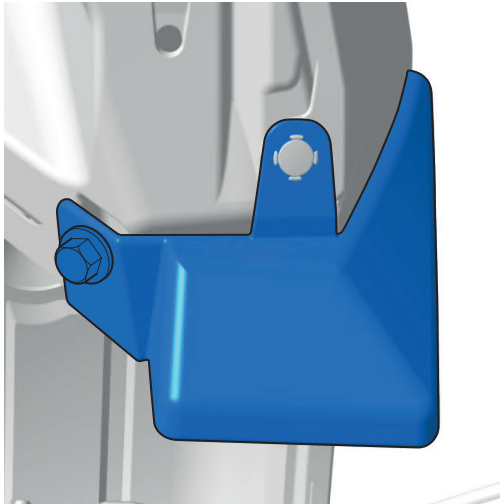

7

☐

☐

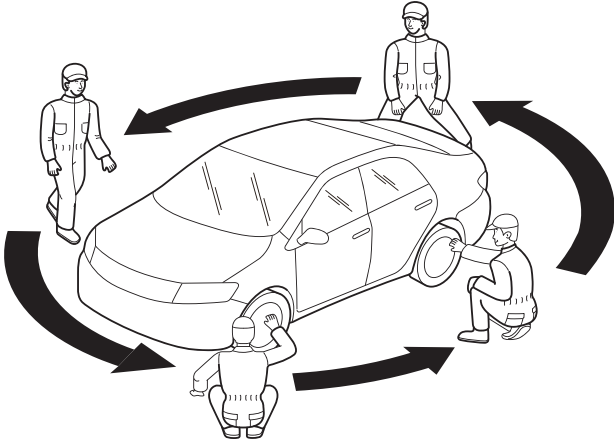



= OK

☐

8

Installation Date:

.. / .. /

Technician Name & Signature: