Land Cruiser 250

Wind Deflectors - Full Kit

Installation Instructions

Model year:	As from 2024/03
Vehicle code:	GDJ25**-GNZLYW
Part number:	PW162-60009

Manual reference number: AIM 005 367-0

Latest Version
SCAN HERE

CONTENT

CLICK TO NAVIGATE

REVISION RECORD ..... Page 3

KIT CONTENT ..... Page 4

TOOLS ..... Page 5

CONSUMABLES ..... Page 5

PERSONAL PROTECTION EQUIPMENT ..... Page 5


USEFUL GENERAL MANUALS ..... Page 5

OVERVIEW ..... Page 6

GENERAL Info ..... Page 6

INSTALLATION INSTRUCTIONS ..... Page 7

CHECK SHEET CHECK SHEET ..... Page 17, 18

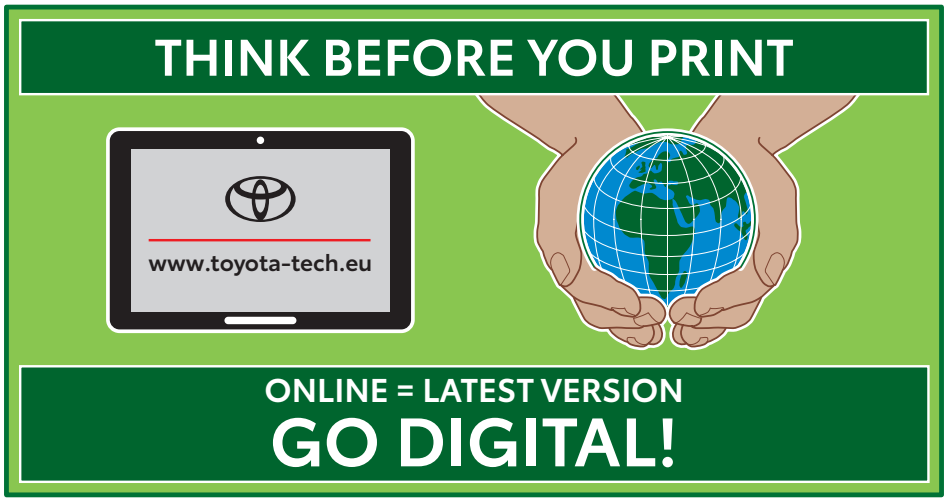




Revision Record

Rev. No.	Date	Page	Step	Remarks

KIT CONTENT


PW162-60009


CHECK SHEET

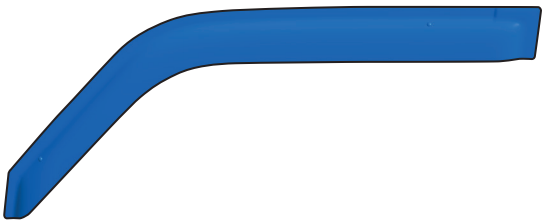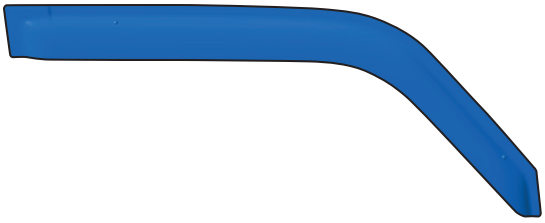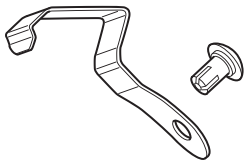A		1x	
B		1x	
C		1x	
D		1x	
E		8x	

CONTENT

TOOLS

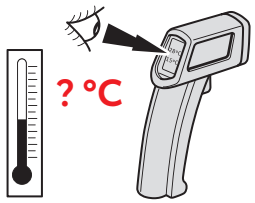


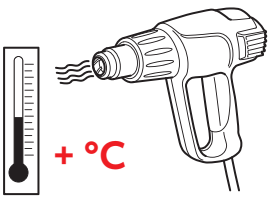


CONSUMABLES

CLEANER / DEGREASER SPRAY



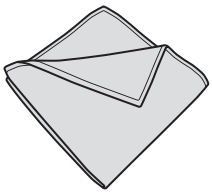


PERSONAL PROTECTION EQUIPMENT

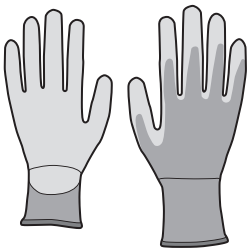

USEFUL GENERAL MANUALS

CLEANER / DEGREASER

Latest Version
SCAN HERE

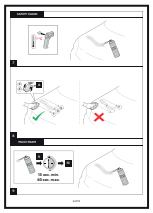


SYMBOLS

Latest Version
SCAN HERE



OVERVIEW

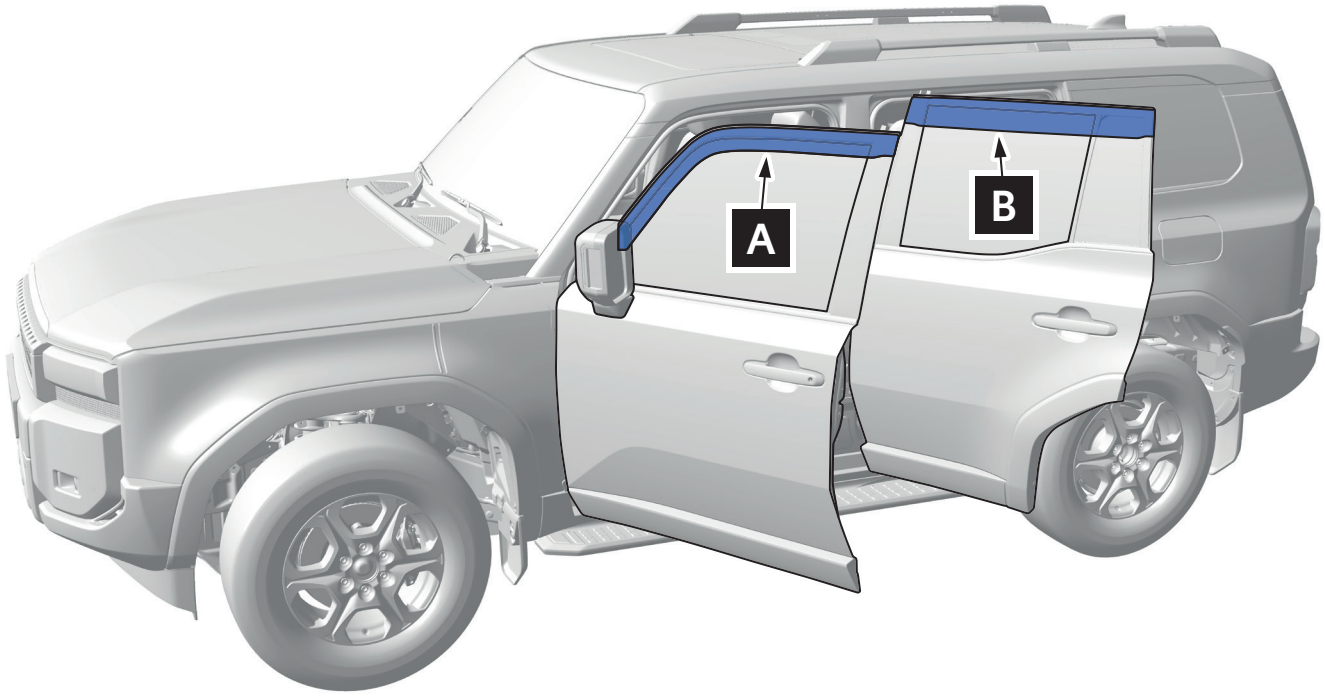

GENERAL

Info







Material Safety Data Sheet








Technical Data Sheet

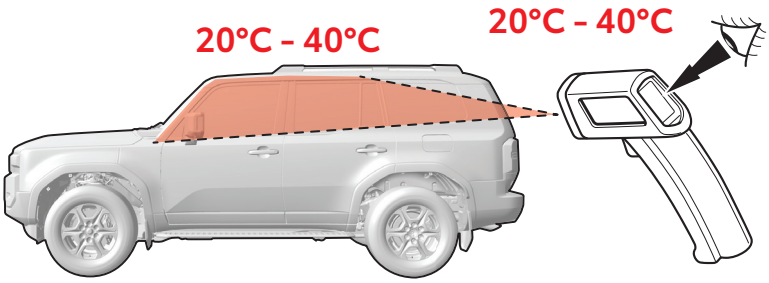

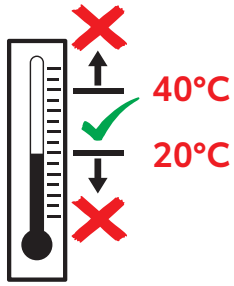

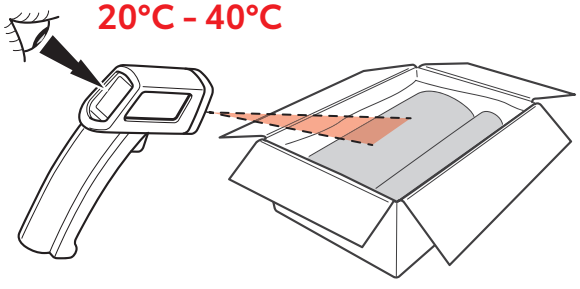


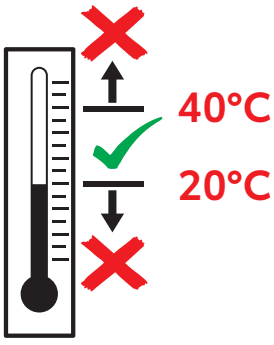

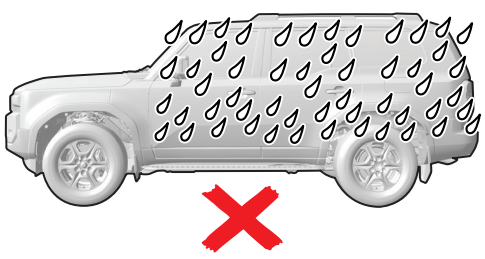


CONTENT


1

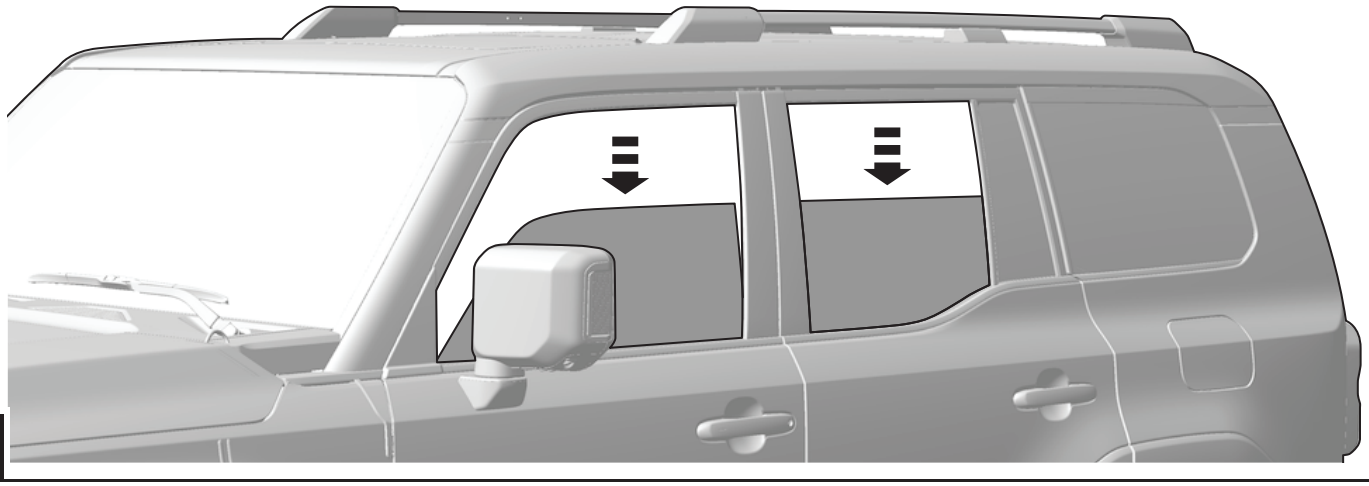


2

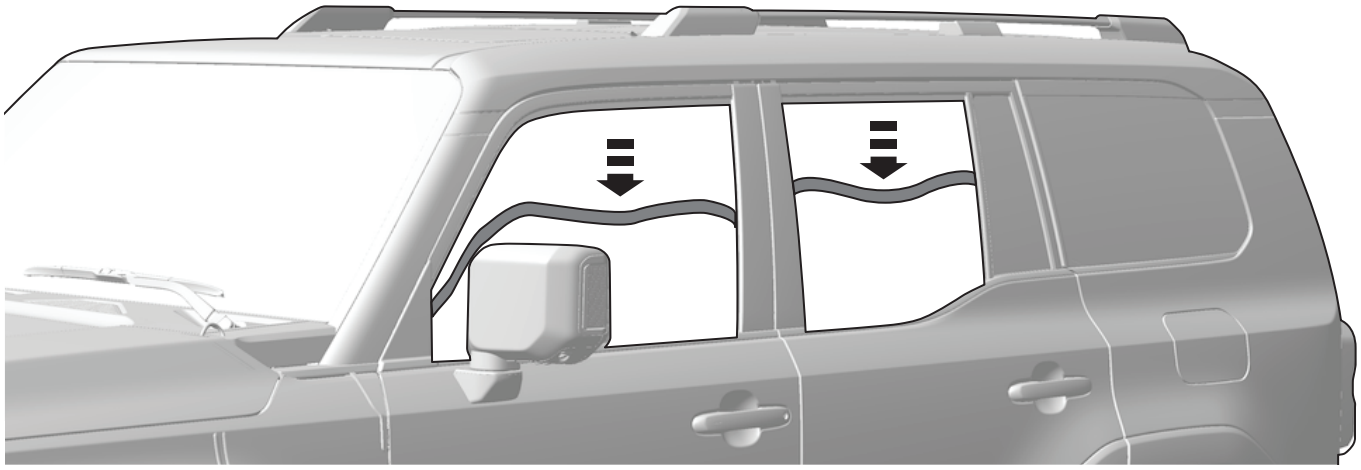


3

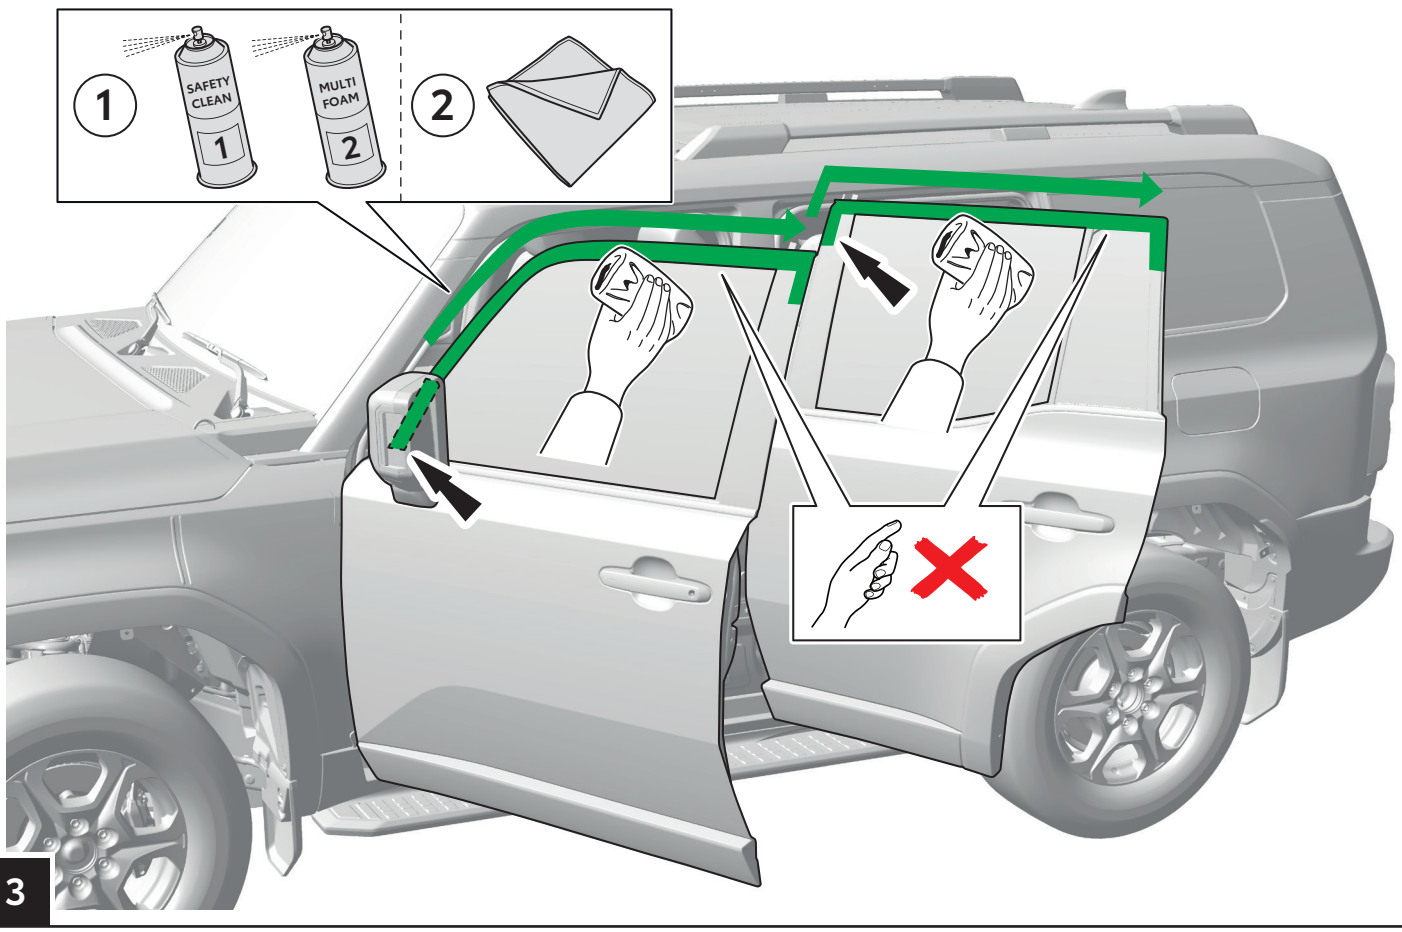


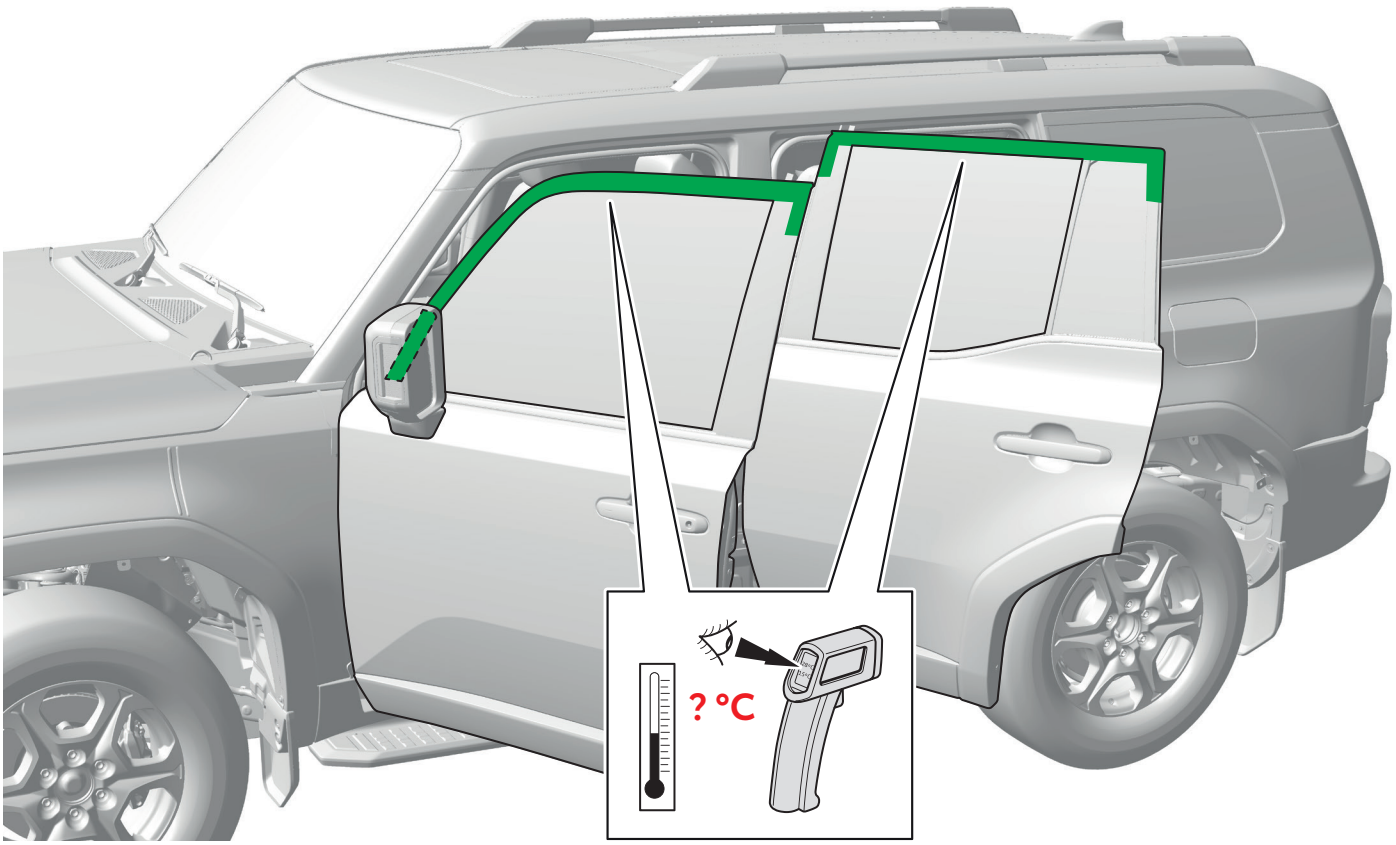


4

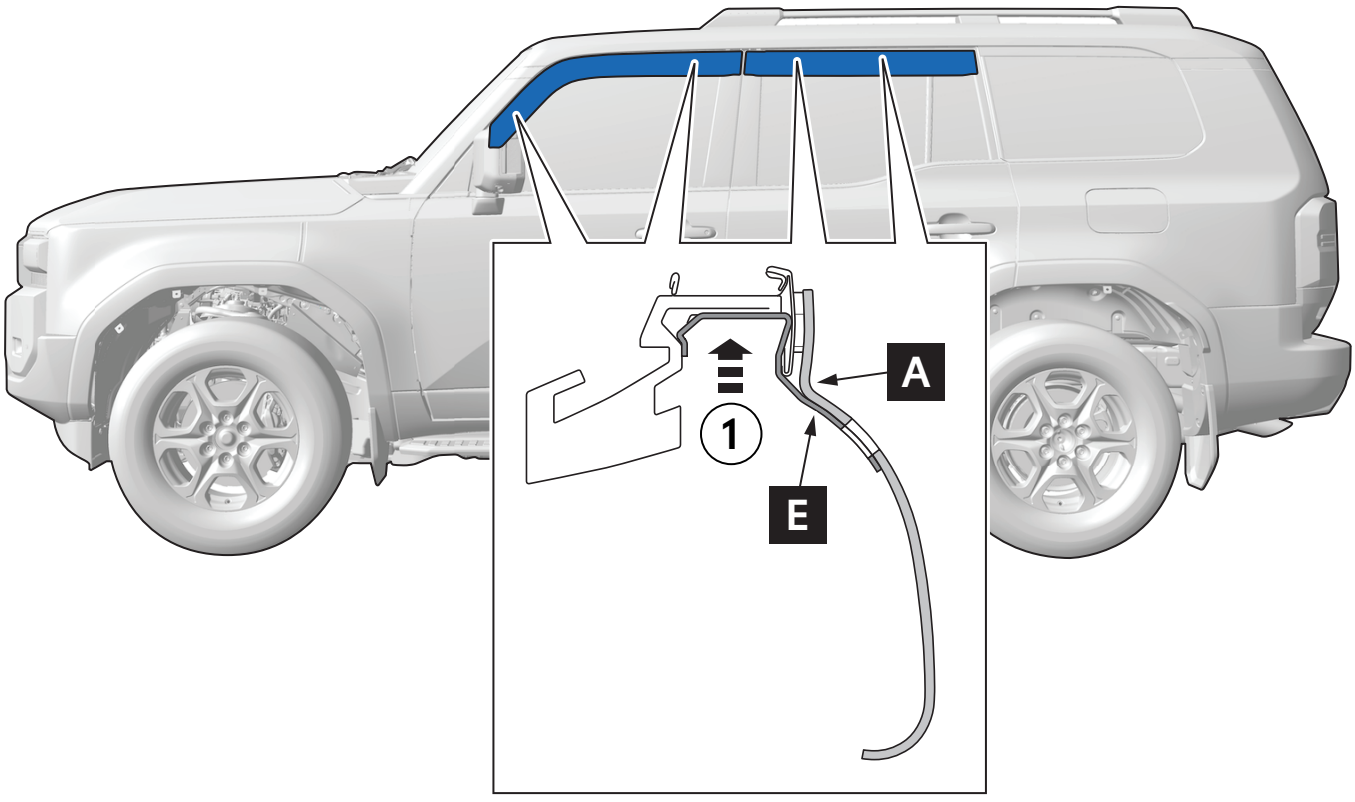


5

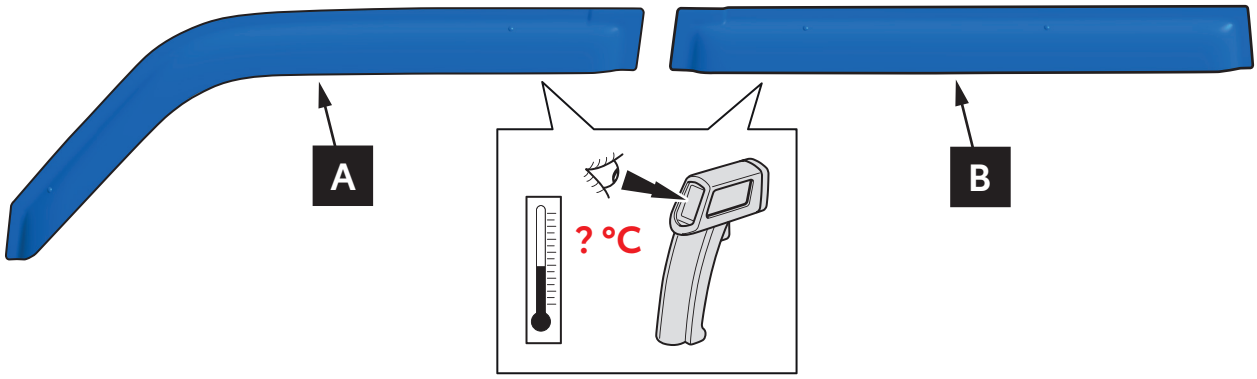


6

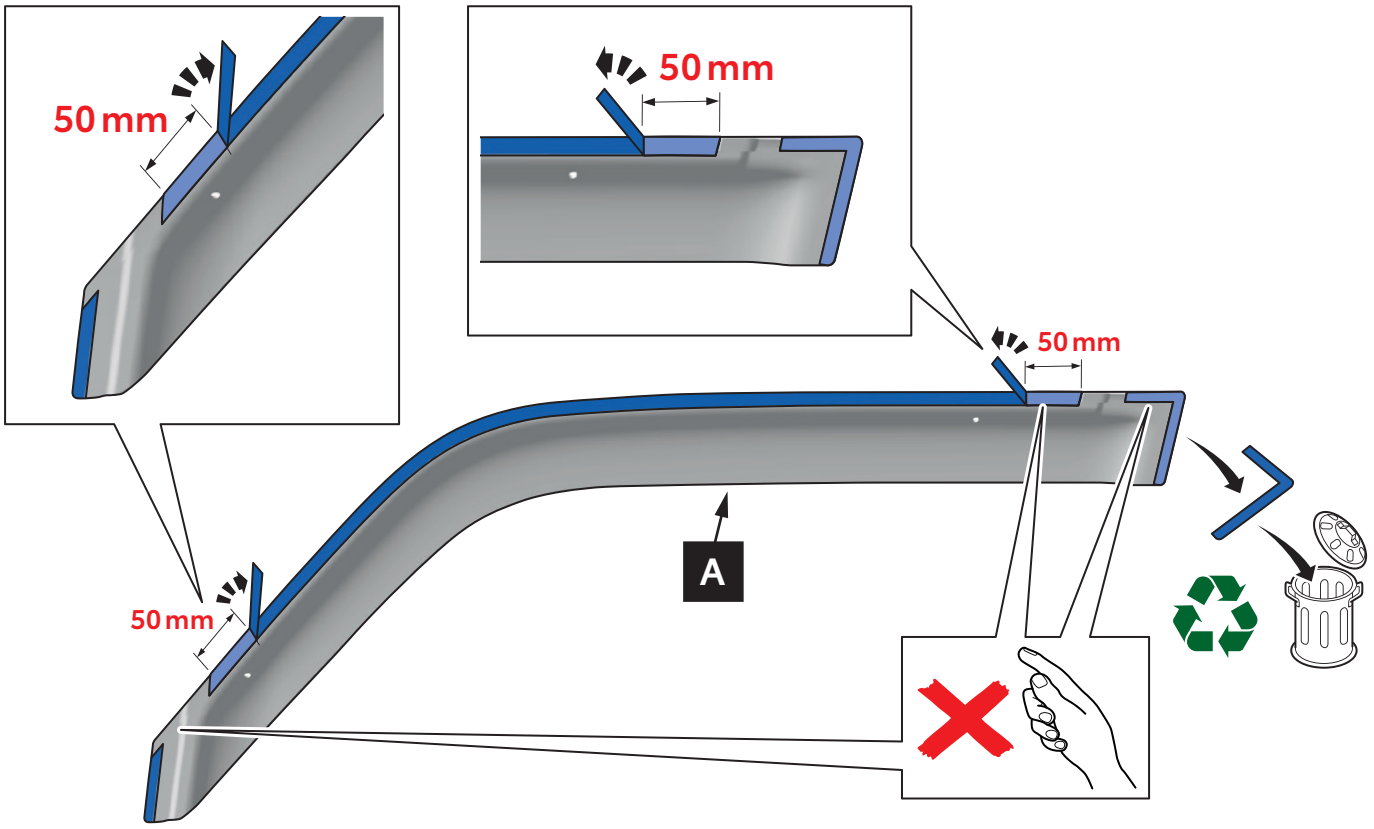

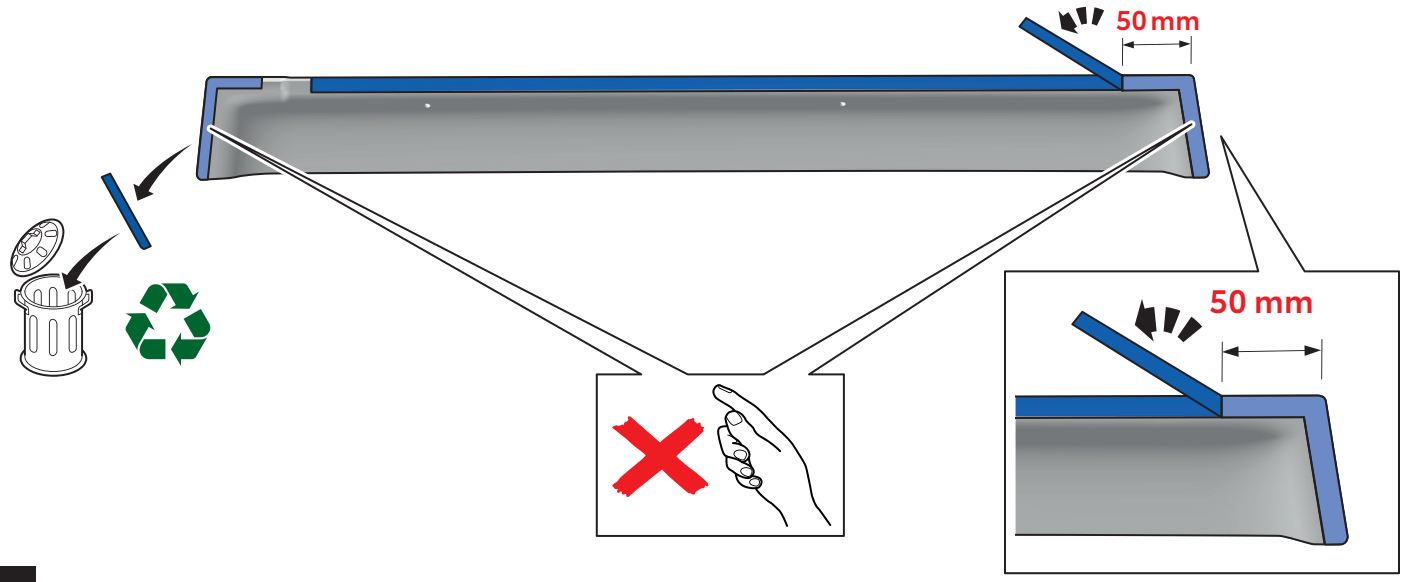


7

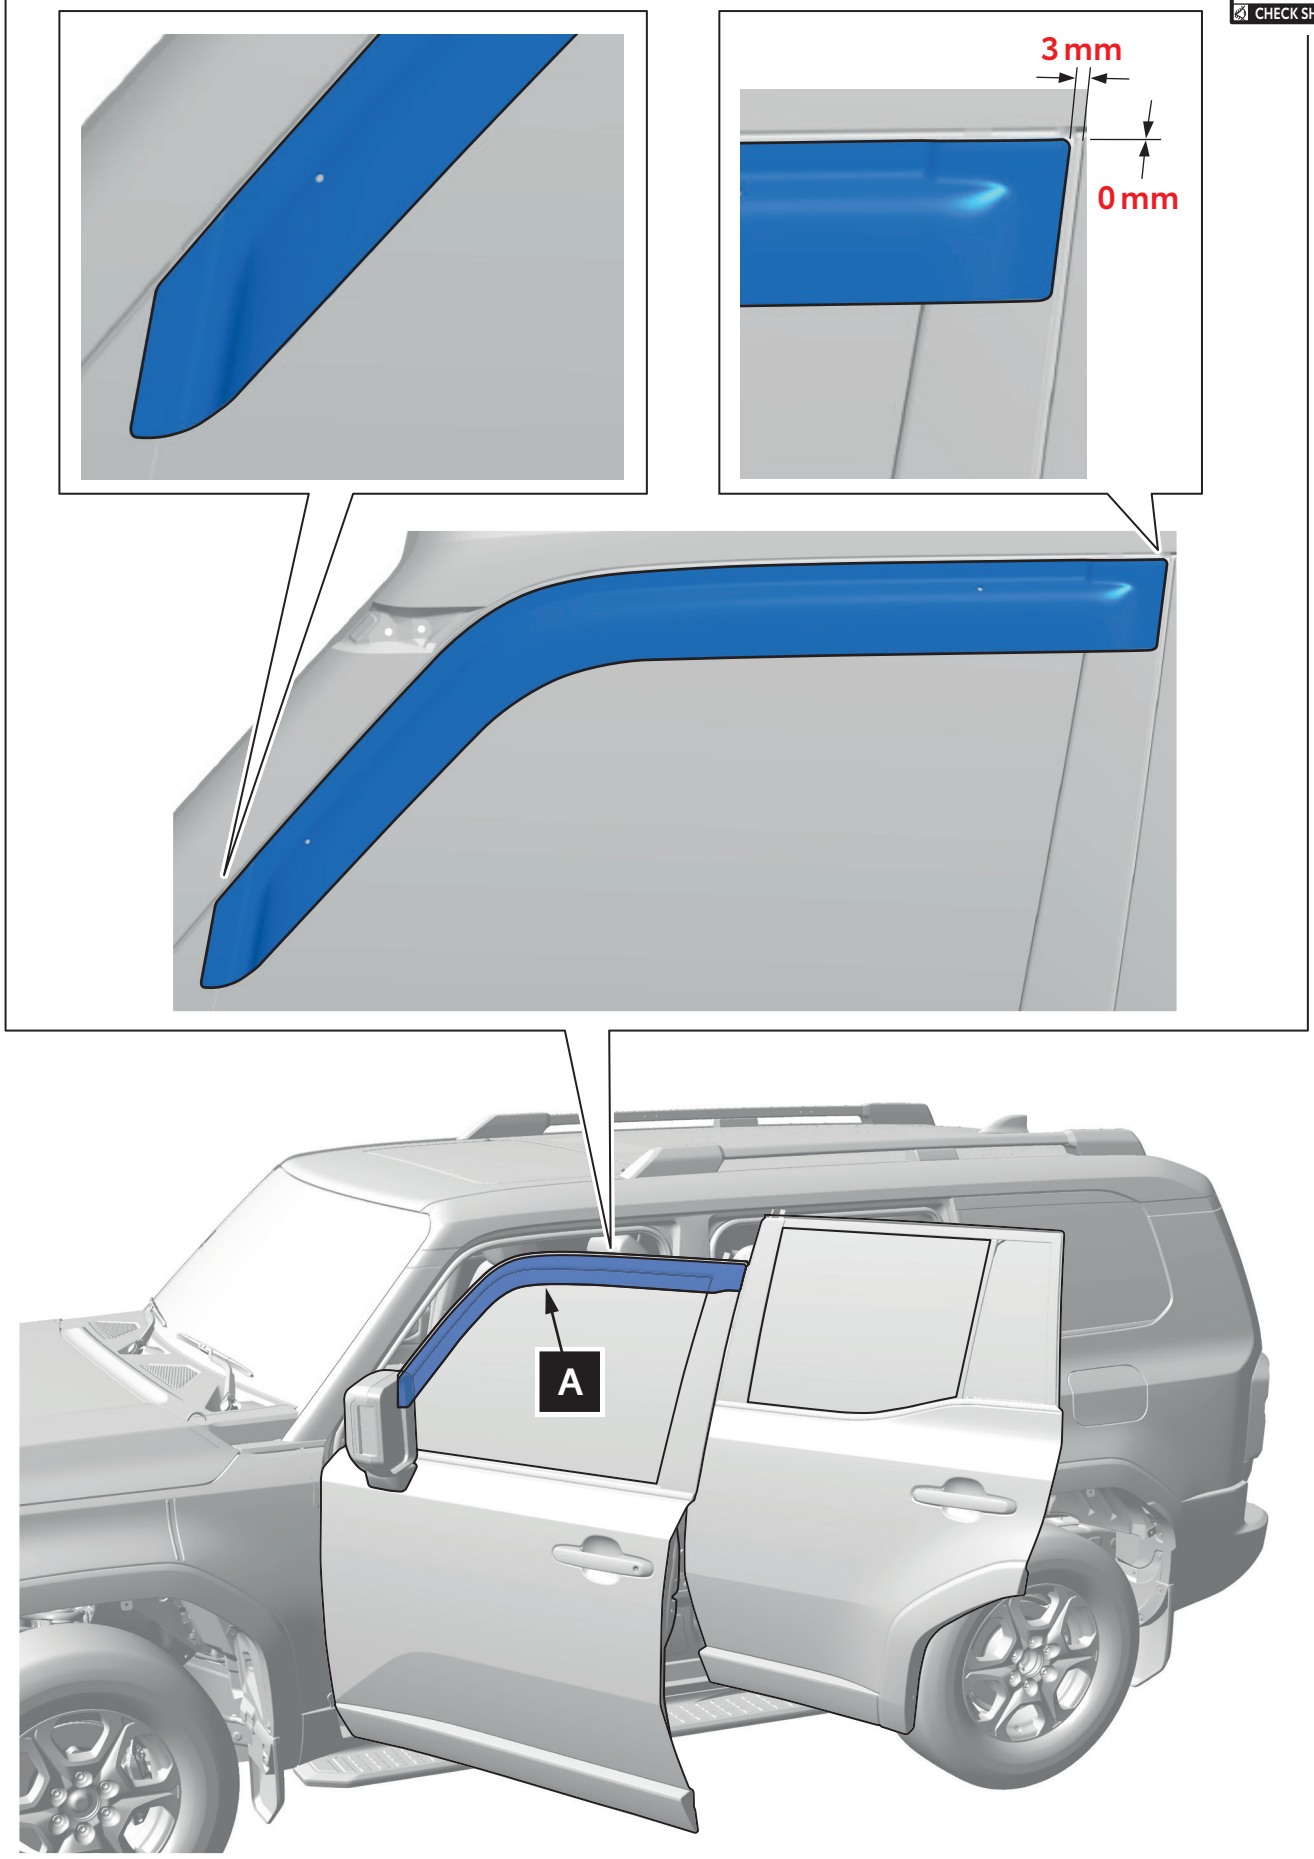


8


CHECK SHEET

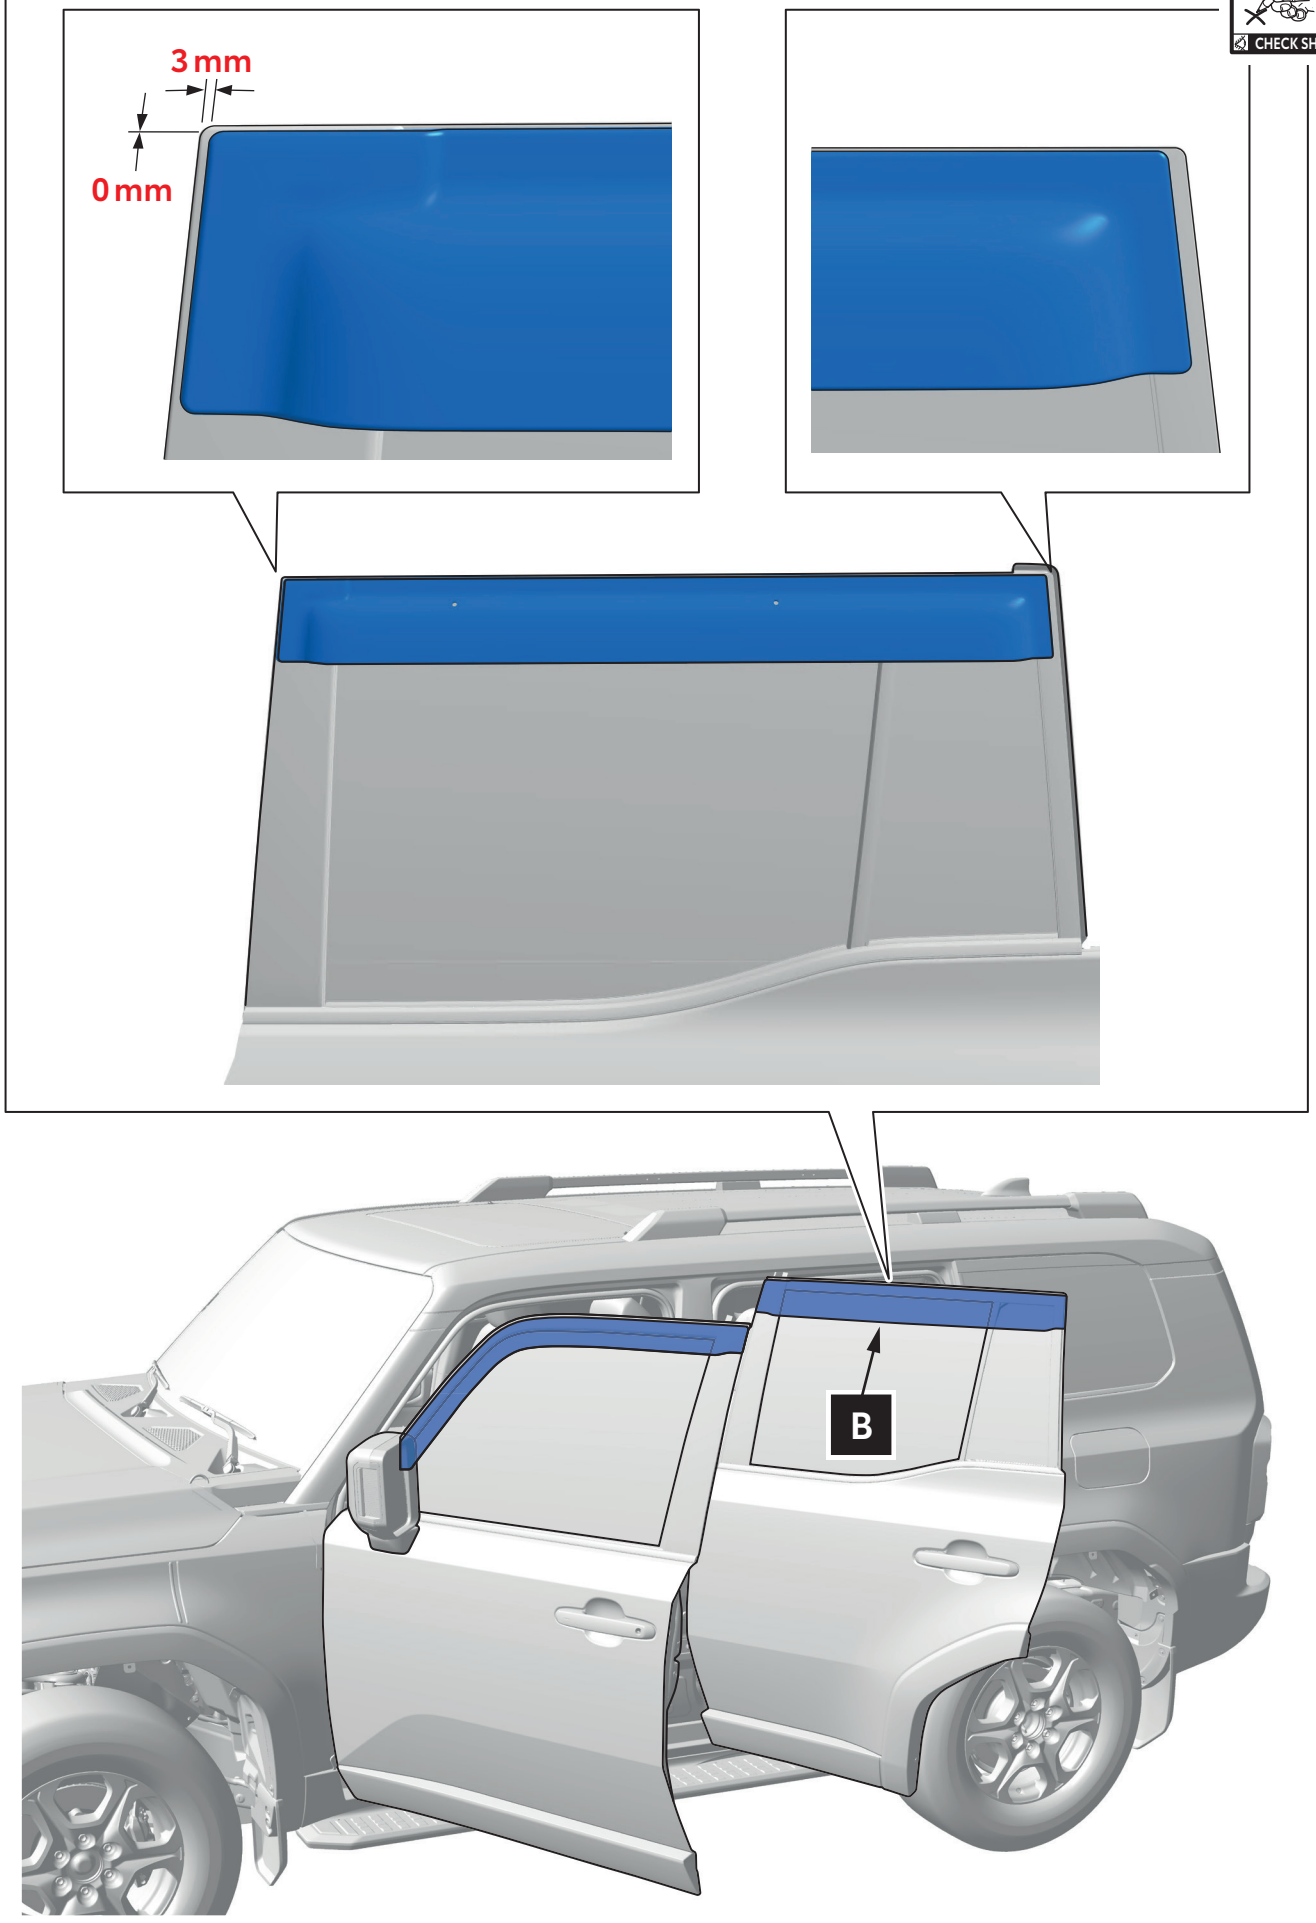


9


CONTENT

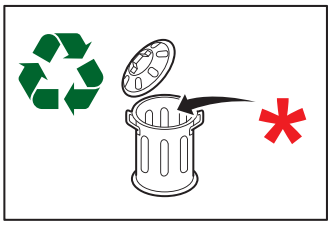

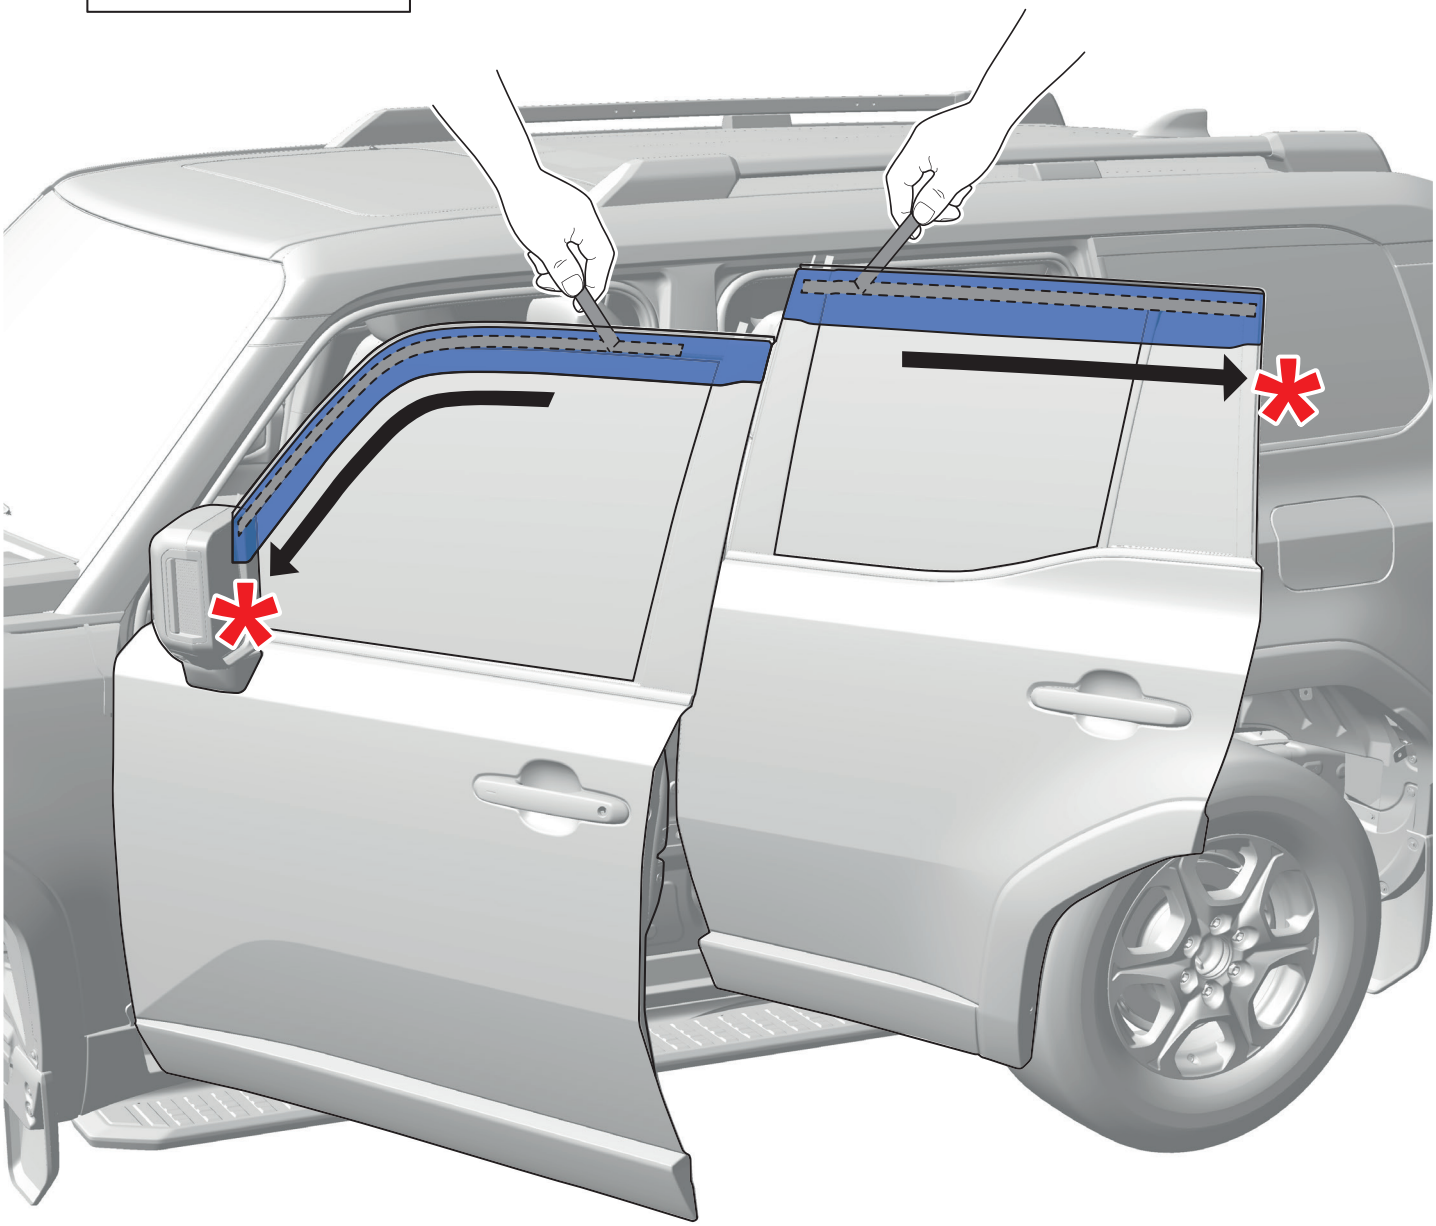


10

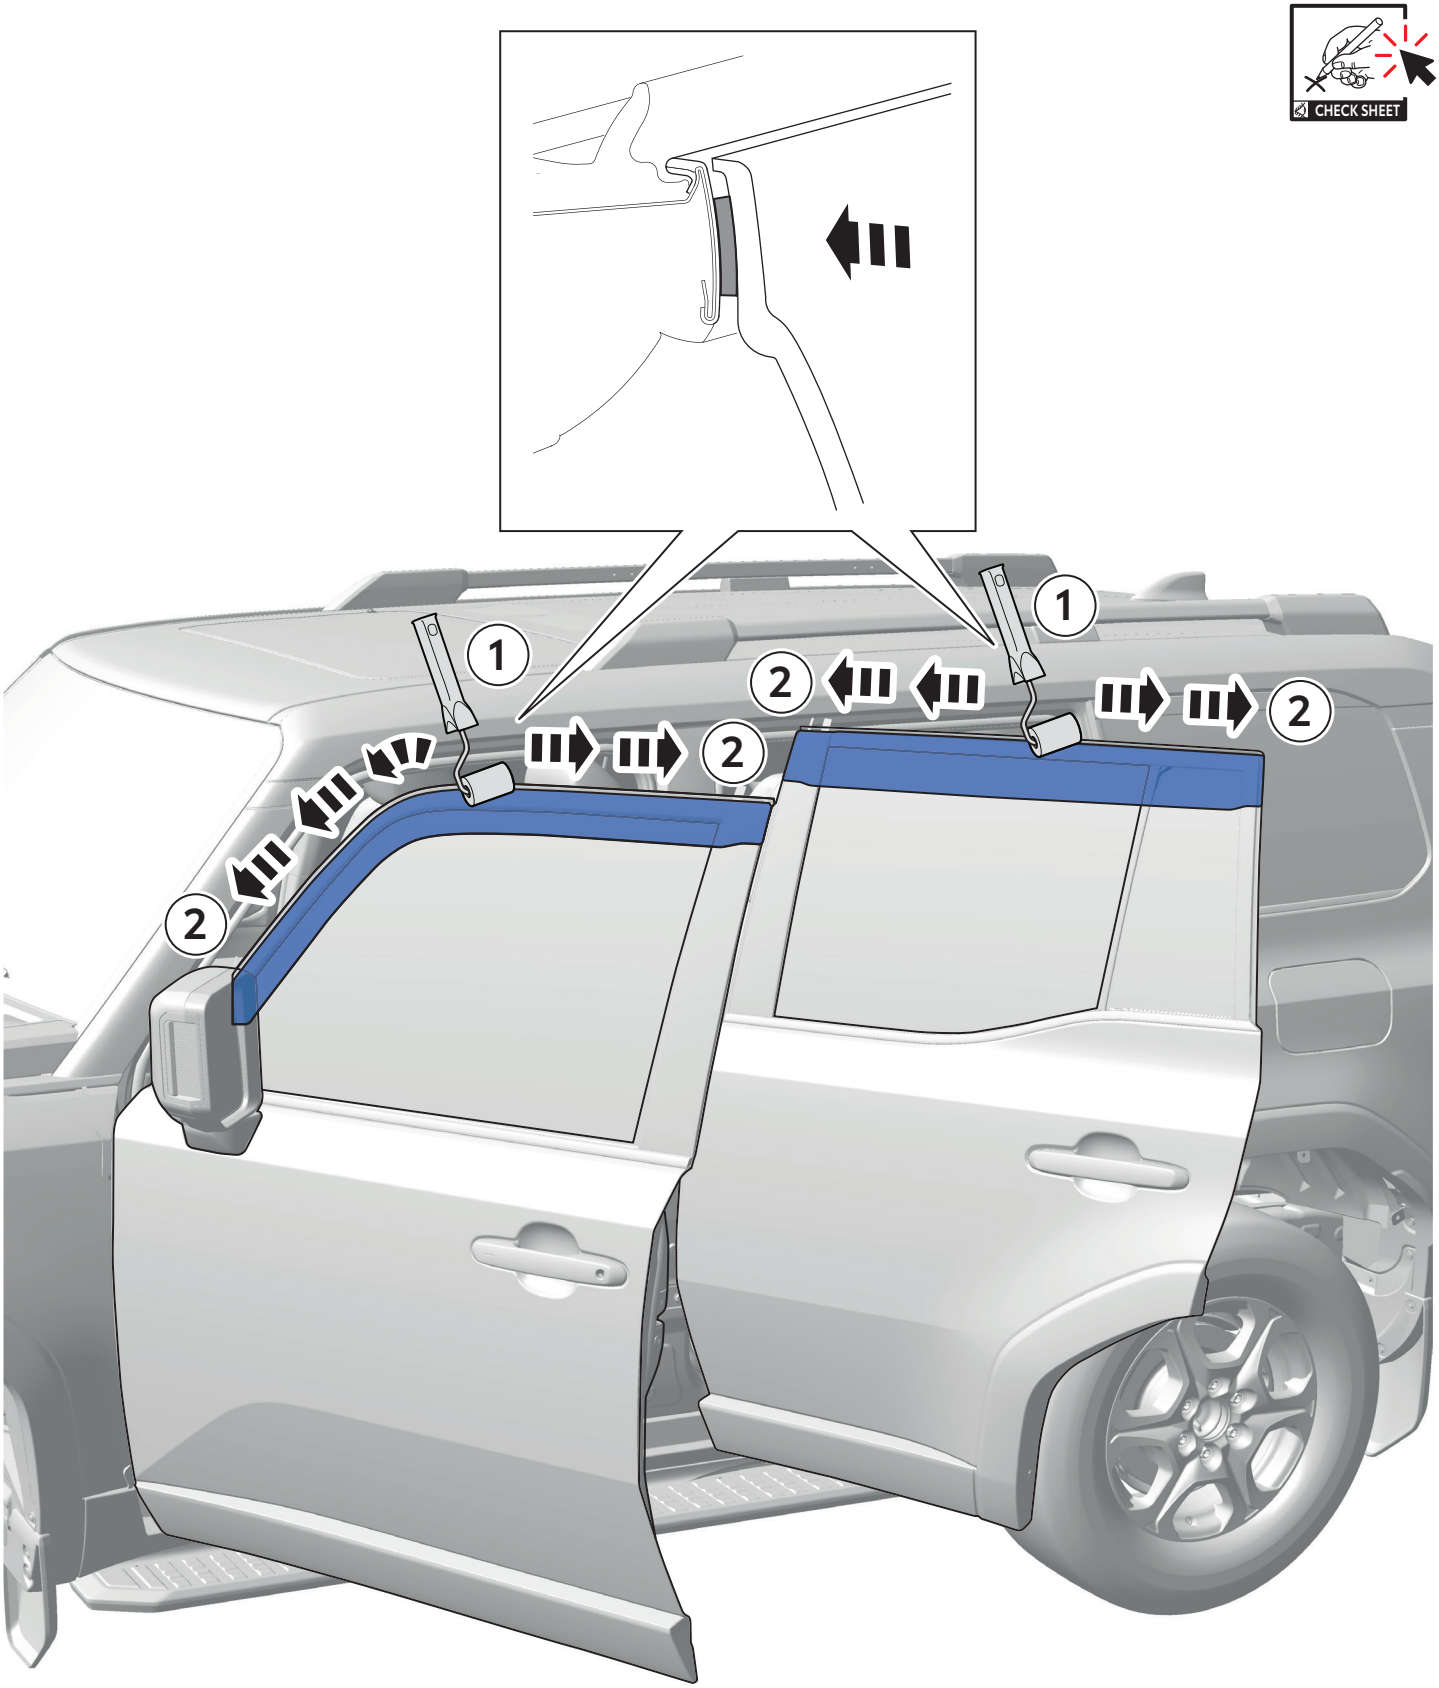


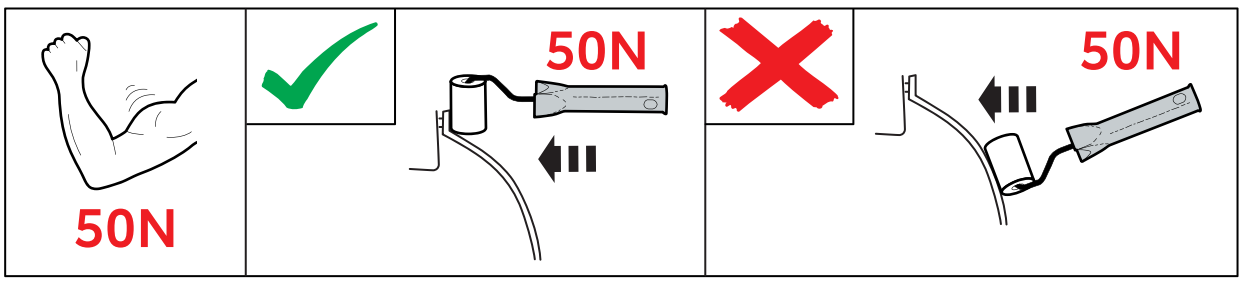


11

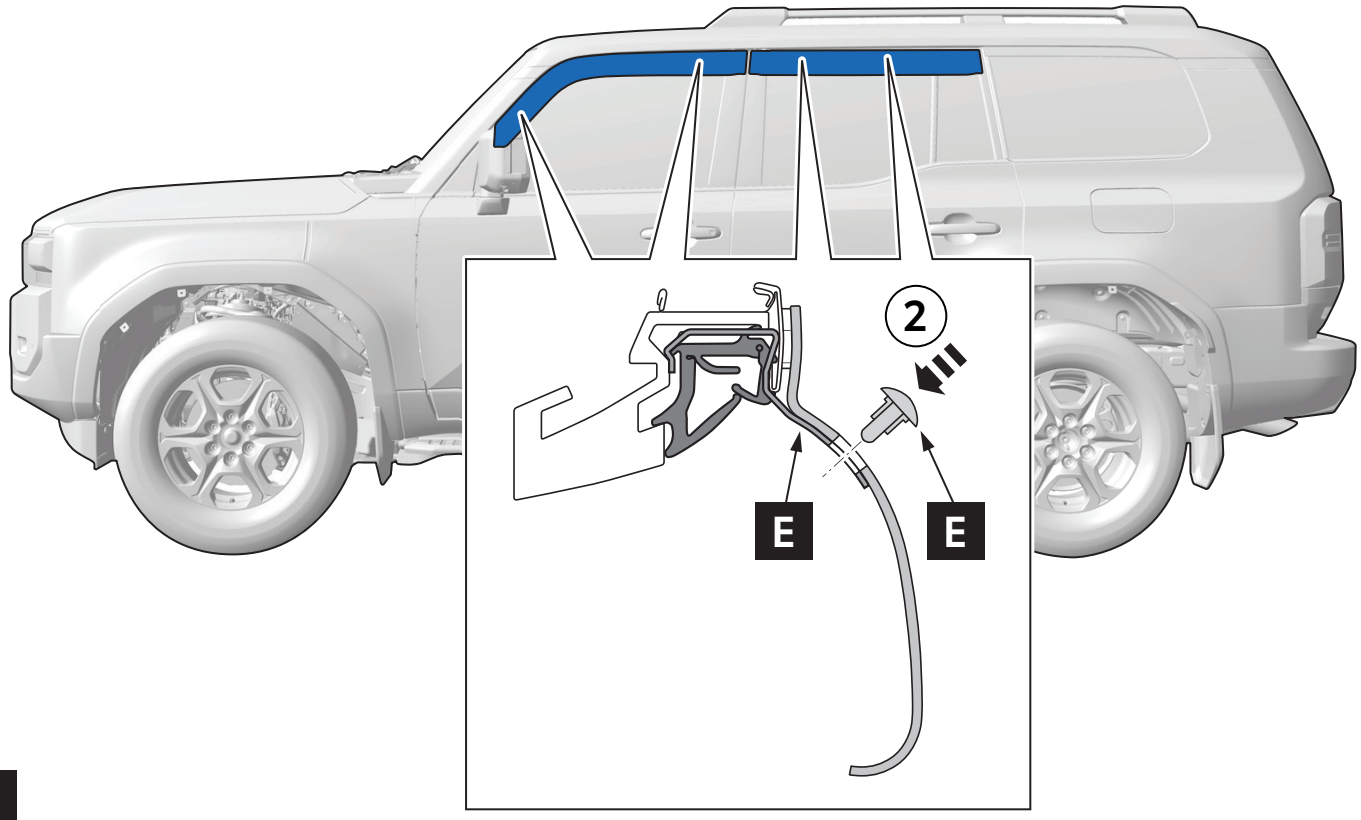

12

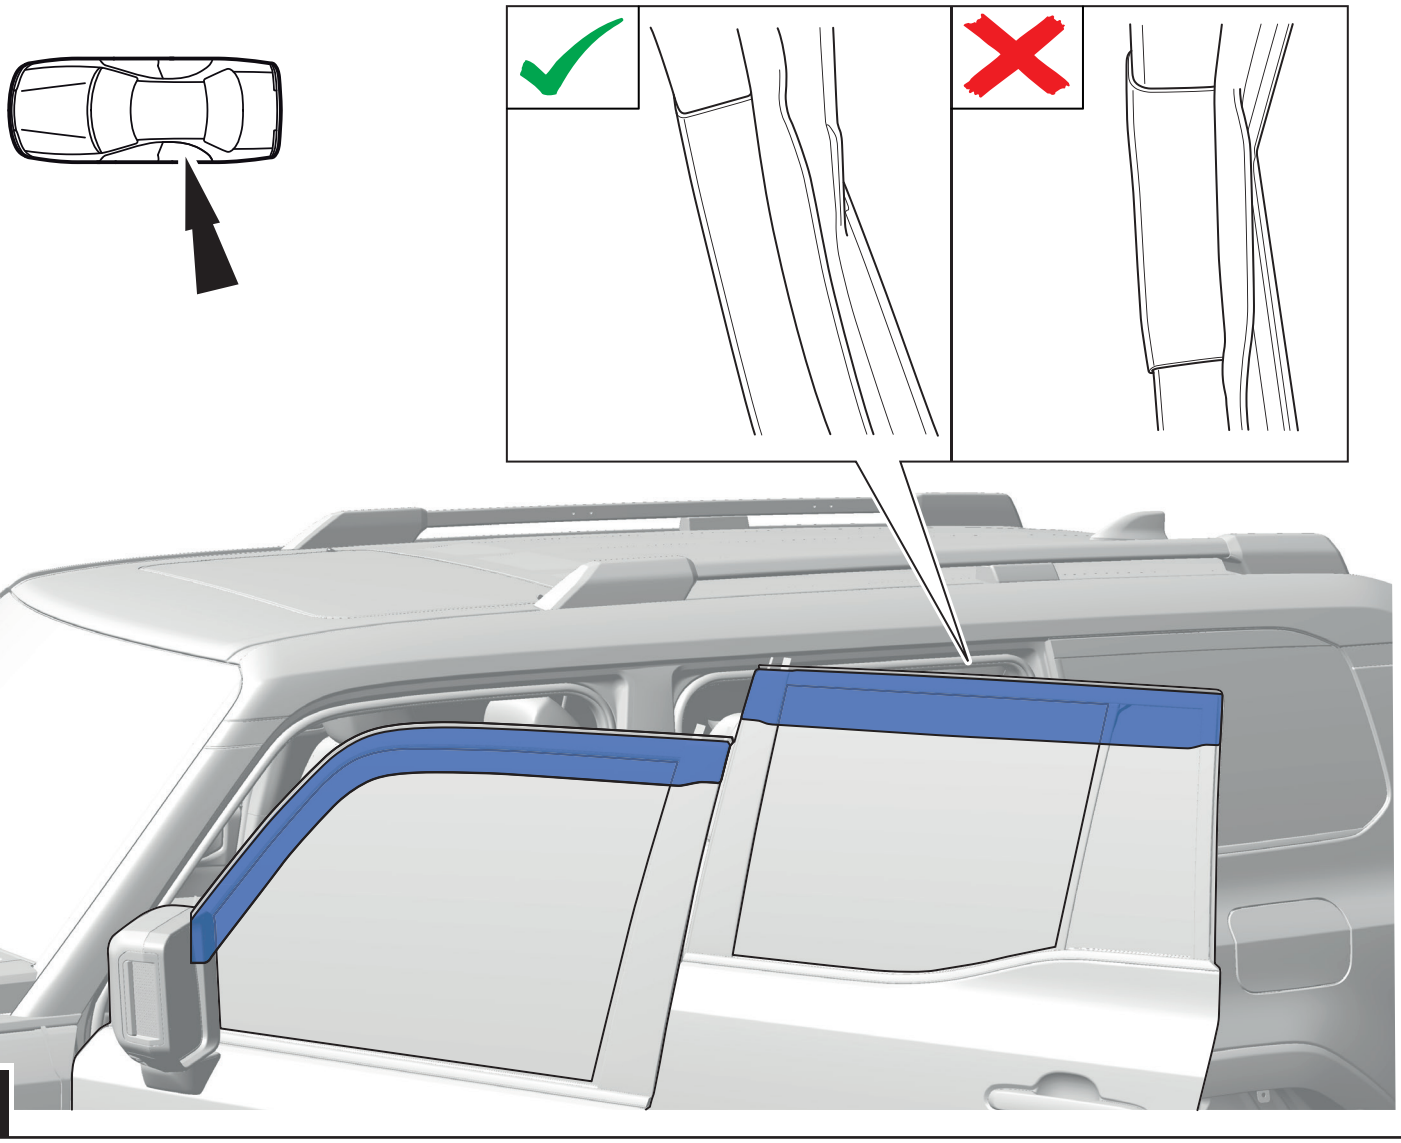


13

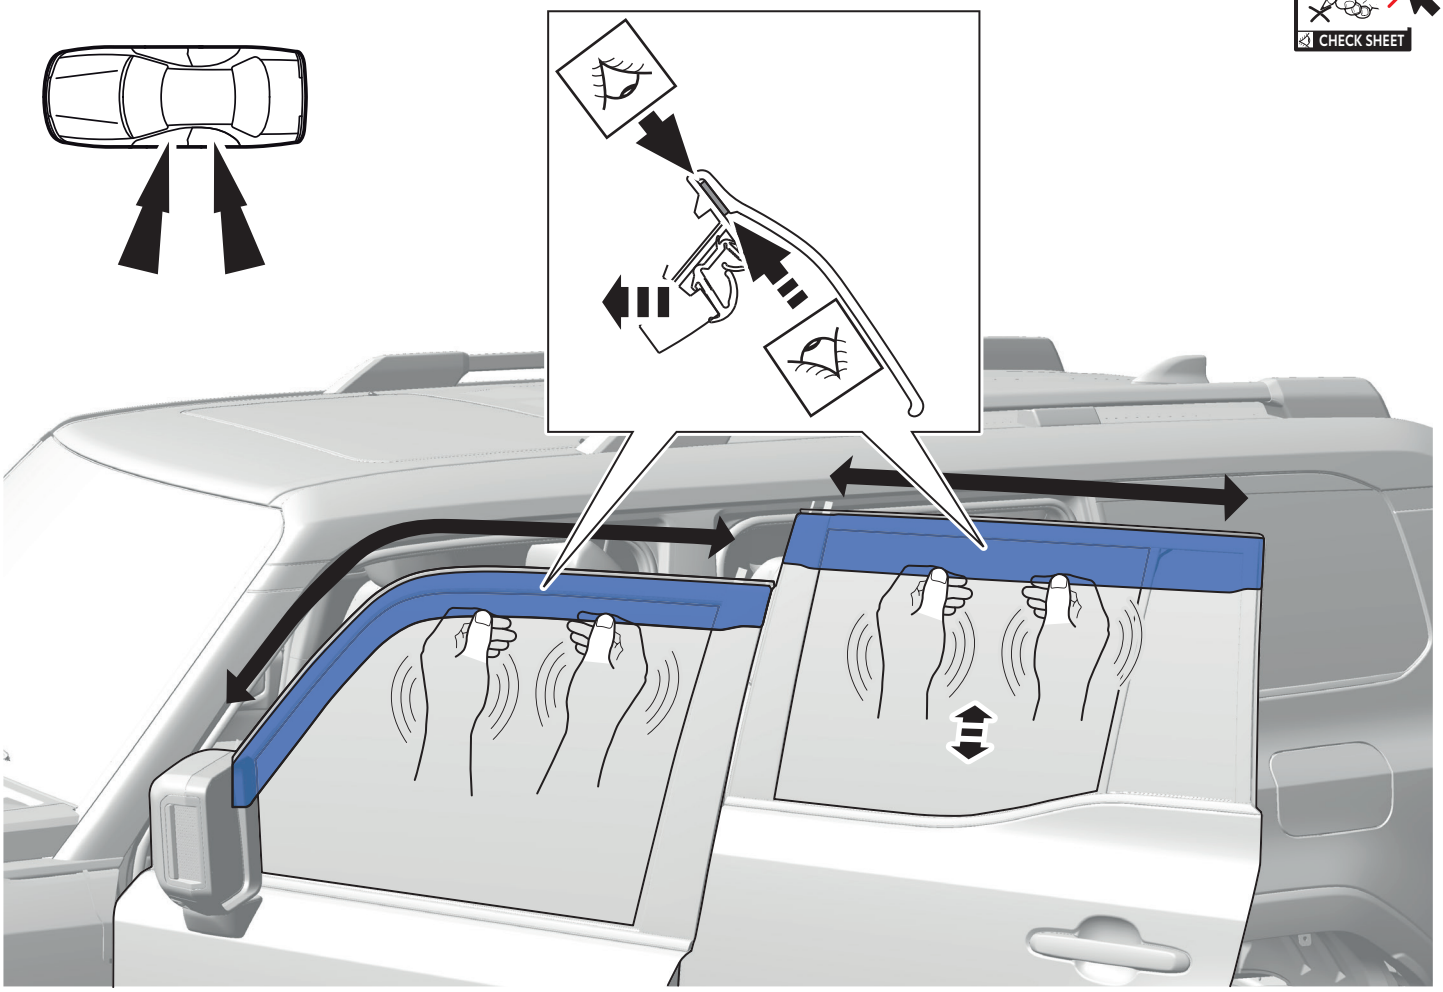



12

RHS = LHS

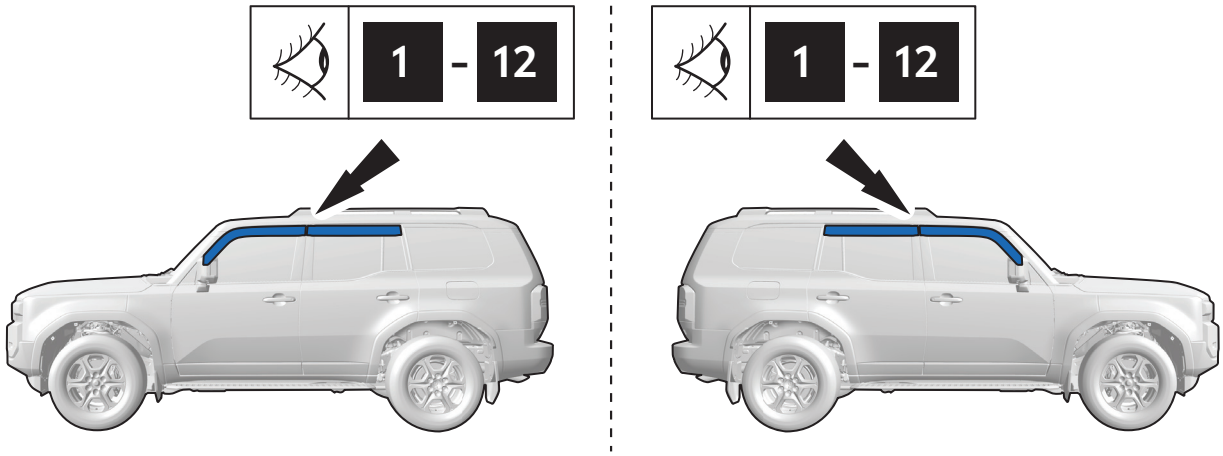



13

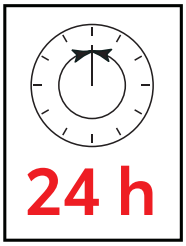


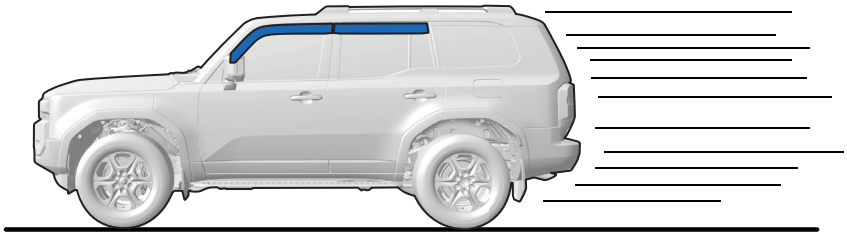


Max. 90 Km/h

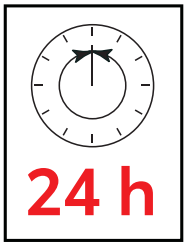

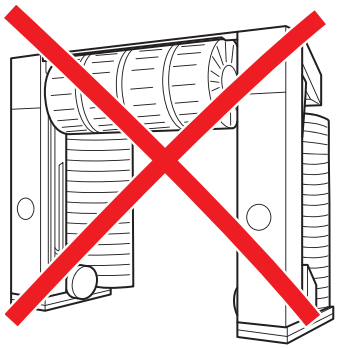

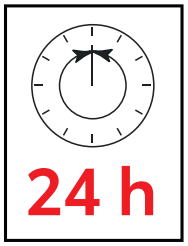



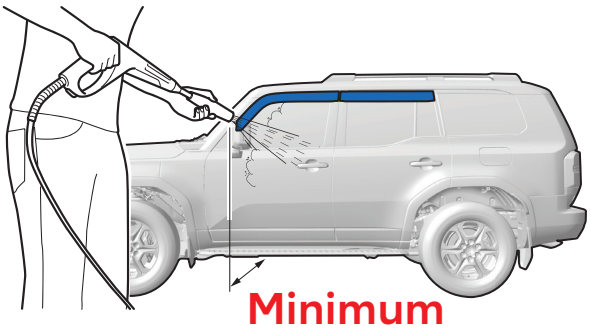

Minimum 50cm.

CHECK SHEET


Model/Year Land Cruiser 250 As from 2023/11

Wind Deflectors - Full Kit


VINn° ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

DURING INSTALLATION

1

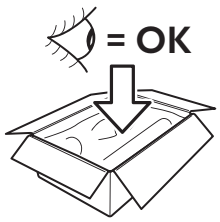


2

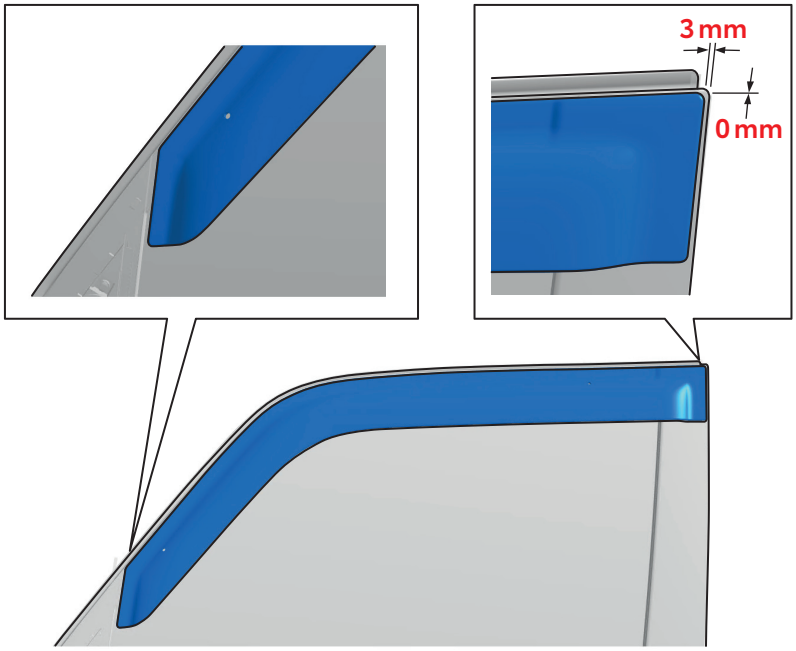

LHS ☐ RHS ☐

3

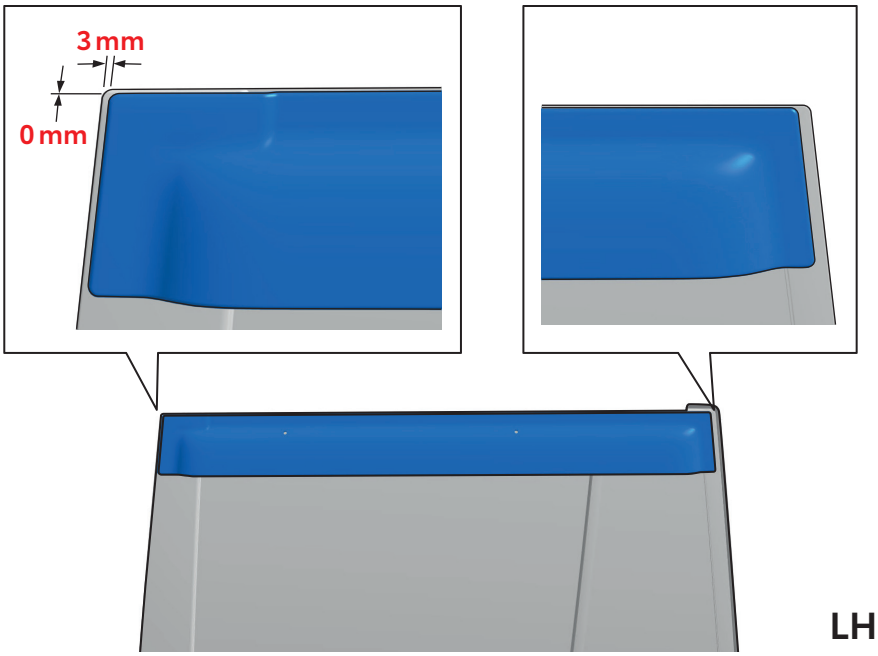


LHS ☐ RHS ☐

CONTENT


AFTER INSTALLATION

1


CHECK

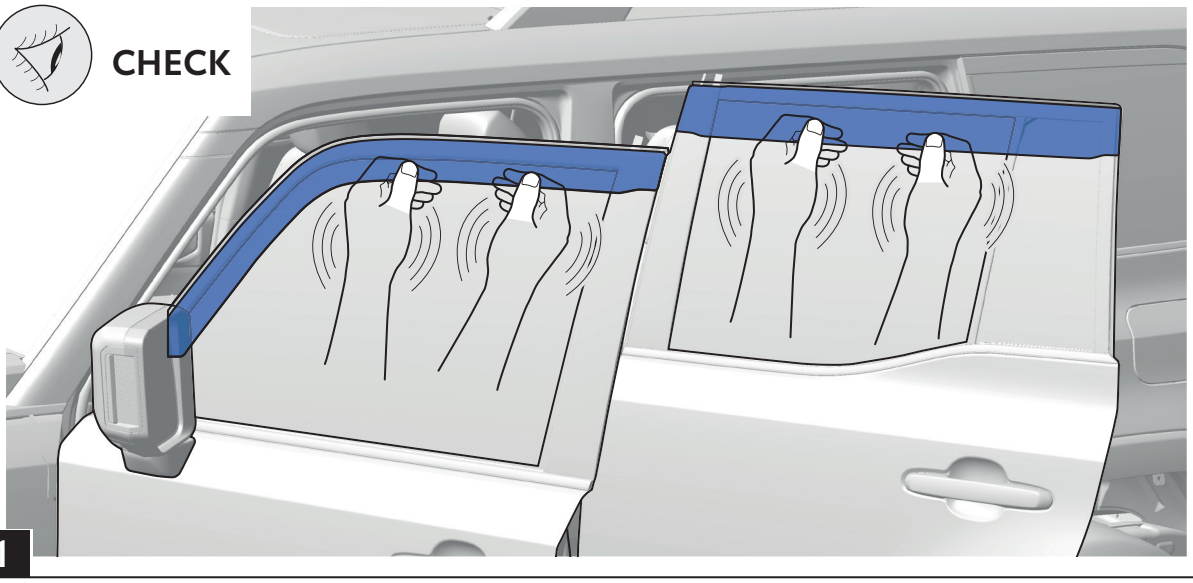

2

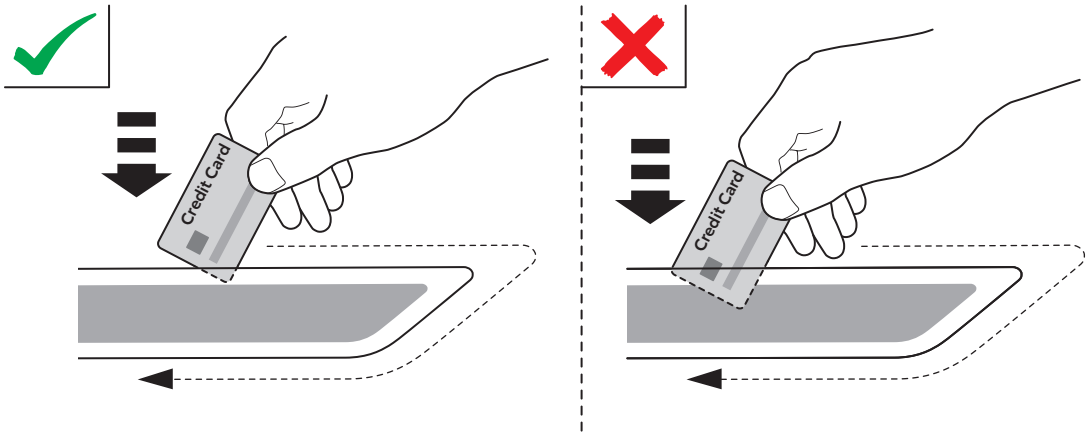

3

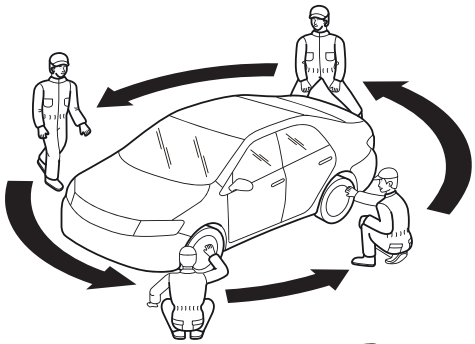

= OK

Installation Date:	Technician Name & Signature:	Stamp:
. . / . . /		

CONTENT